

ASSEMBLY INSTRUCTIONS

Read these instructions carefully. Refer to hardware and furniture parts list for guidance. Be sure all parts are complete, before assembling. Place all wooden furniture parts on a clean and flat soft surface to prevent scratches. Refer to steps provided as assembling guide.


CAUTIONS :

1. Do not **FULLY-TIGHTEN** the nuts or nut bolts until all are in place.
2. To prevent thread damage. Ensure that nuts or nut bolts are not over-tightened.
3. Hardware is to be kept out of reach of children.


PART LIST		
ITEM	DESCRIPTION	QTY
A	BACK CUSHION	1 PC
B	CUSHION SEAT	1 PC
C	SIDE LEG LEFT & RIGHT	2 PCS
D	BACK RAIL	1 PC
E	FRONT RAIL	1 PC

HARDWARE LIST		
ITEM	DESCRIPTION	QTY
1	JCBC SCREW M6 x 50mm	8 PCS
2	JCBC SCREW M6 x 35mm(BIK)	4 PCS
3	SPRING WASHER 1/4"	8 PCS
4	SPRING WASHER 1/4"(BIK)	4 PCS
5	PAN HEAD WOOD SCREW M5 x 32mm	4 PCS
6	WOOD DOWEL DIA 8 x 25mm	2 PCS
7	WOOD DOWEL DIA 8 x 35mm	4 PCS
8	ALLEN KEY M4 (BALL SHAPE)LONG	1 PC
9	ADJUSTABLE SCREW	4 PCS


STEP 1 :

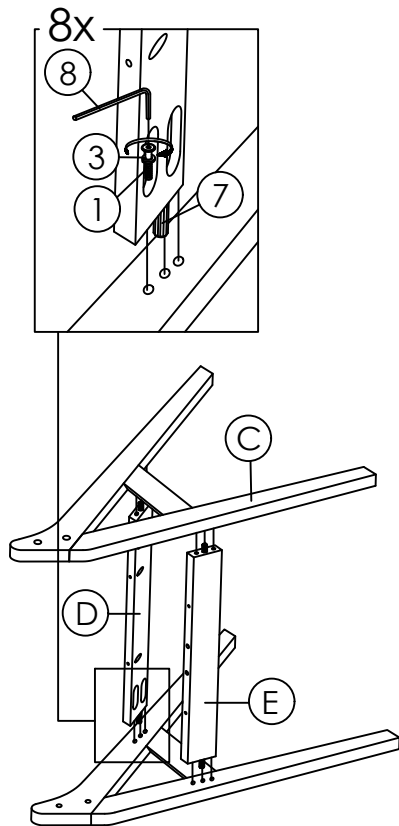


STEP 2 :

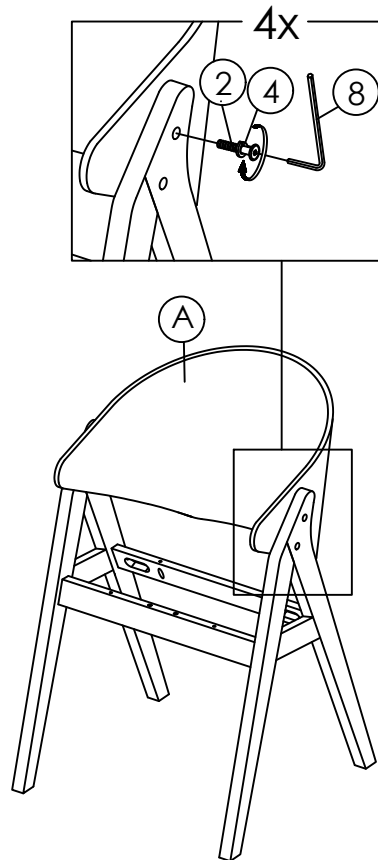

STEP 3 :

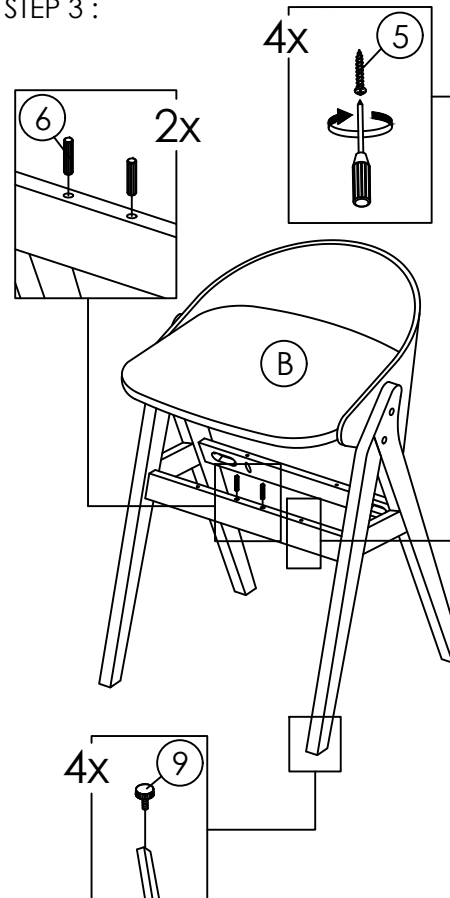

STEP 4 :

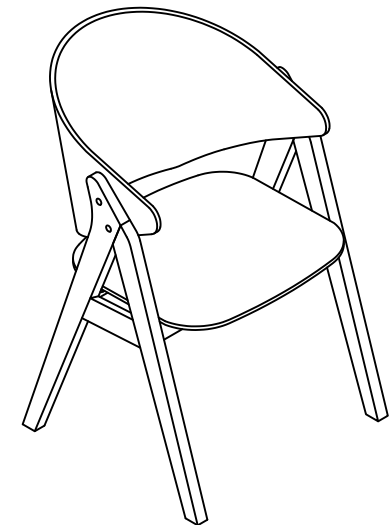

COMPLETED ASSEMBLY