





HM9049


1  x1	2  x1	3  x2	4  x2	5  x1	A  (6.3x50) x4
B  (6x25) x4	C  (3.5x20) x9	D  (3.5x12) x24	E  x12	F  x9	G  x12

Step 1

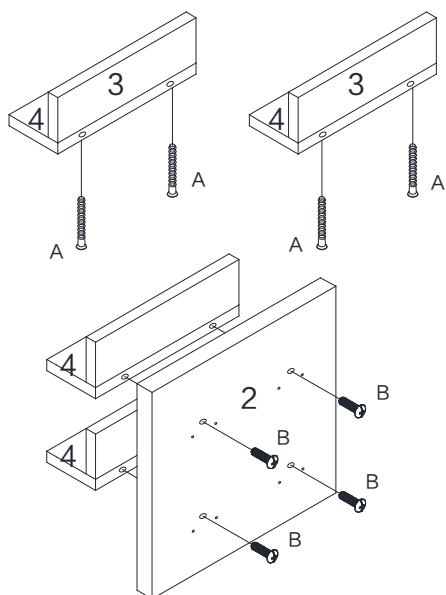


A	x4
B	x4

Step 2

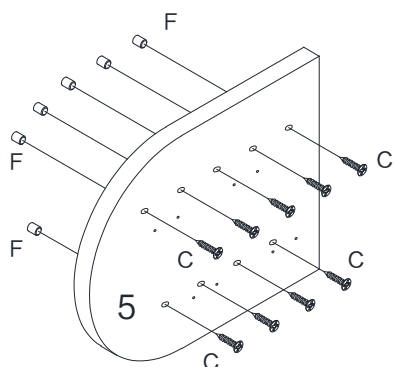


C	x9
F	x9

Step 3

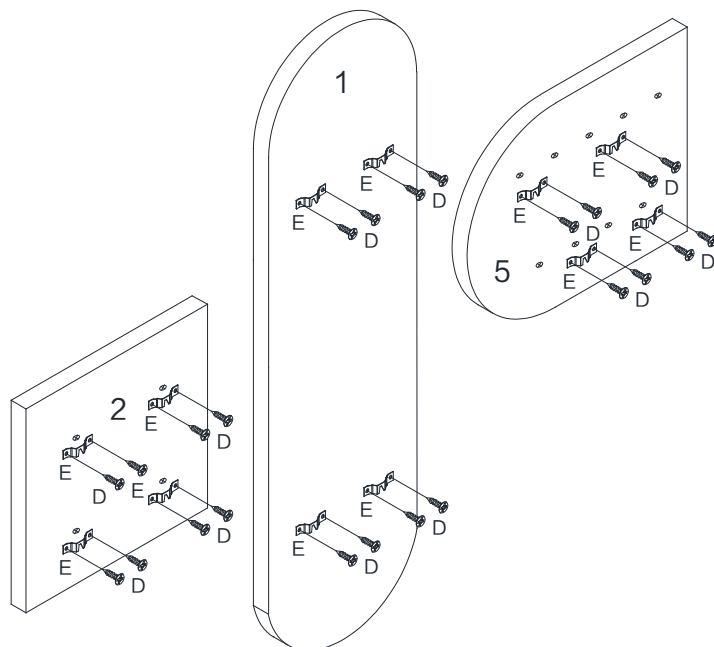

D	x24
E	x12

Step 4

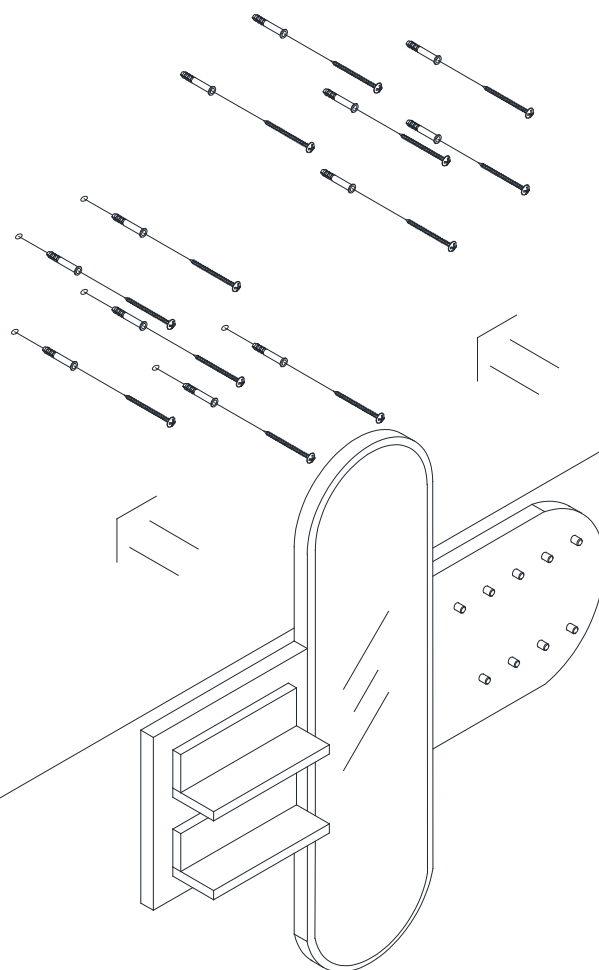

First, place the F screw sleeve on the wall
then tighten the F pointed screw.
If it cannot be tightened, just hang the
installed finished product on it.

G x12

Complete

