

1 X1 2 3 X2 4 X2 A (6x35mm) X8 B (6x30mm) X6	Step 1 Accessories used AX8	Step 2 Accessories used BX6	complete
---	---	---	--

complete

Accessories used	
	AX8

Step 2

Accessories used	
	BX6

Step 1

Diagram illustrating the assembly of the bed frame, showing the connection of the base frame (labeled 2 and 3) and the attachment of the corner braces (labeled 4) using screws (labeled A).

Accessories used

Step 2

This diagram illustrates the second step of the assembly process. A large rectangular panel, representing the front of the cabinet, is shown being aligned with the front frame. The frame is composed of two horizontal rails and two vertical legs. Four screws, labeled 'B', are shown being inserted into the front panel to secure it to the frame. The number '3' is placed near the top of the frame, and the number '4' is placed near the bottom of the frame, indicating the positions of the screws.

Accessories used


Accessories used

	Accessories used	
		AX8


complete

Accessories used	
	BX6


complete

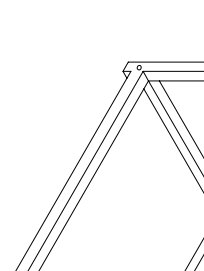


complete

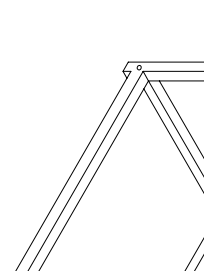

complete

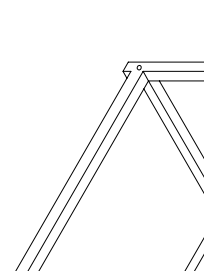

complete

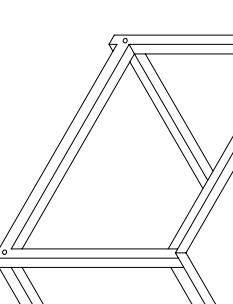

HM8975

1 X1 2 3 X2 X2 4 X2	Step 1 Accessories used AX8	Step 2 Accessories used BX6
A (6x35mm) X8 B (6x30mm) X6	complete	