



HM2130

Step 1

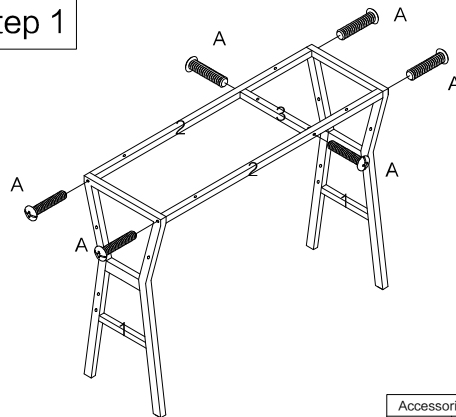


Accessories used	
	AX6

Step 2

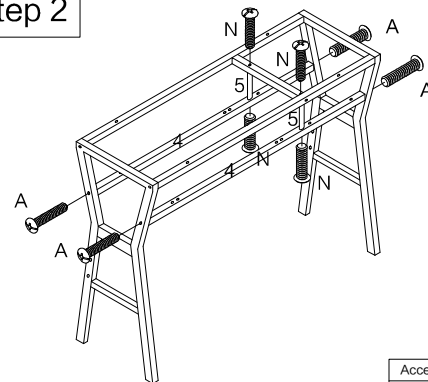


Accessories used	
	AX4
	NX4

Step 3

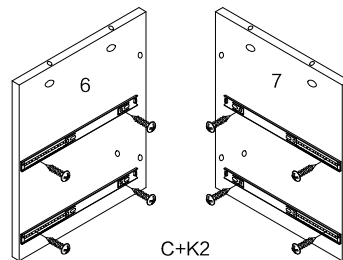

Accessories used	
	CX8

Step 4

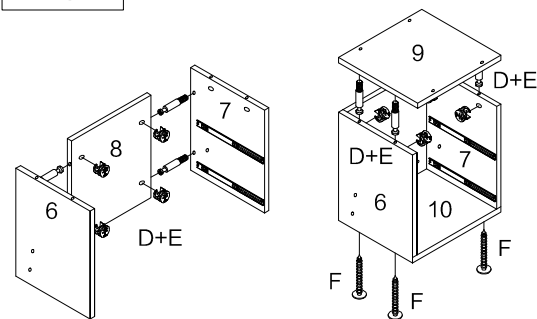

Accessories used	
	DX8
	FX4
	EX8

1 	2 	3
X2	X2	X1
4 	5 	6
X2	X2	X1
7 	8 	9
X1	X1	X1
10 	11 	12
X1	X2	X1
13 	14 	15
X1	X1	X2
16 	17 	18
X2	X2	X2
19 	A 	B
X2	(6X35mm) X10	(6X30mm) X12

C 	D 	E 	F
(3.5X12mm) X20	X16	X16	(5X50mm) X8
G 	H 	I 	J
(4X30mm) X4	X4	(4X18mm) X4	(6X45mm) X2
K 	L 	M 	N
X4	X2	X2	(6X25mm) X4
O (Thickening) 			
X2			
P 			
(5X50mm) X8			

Align the guide rail and drawer position, screw in the screws to fix.


Press the clasp mechanism handle to separate the guide rail.

Screw in the screws to fix the guide rail and cabinet.

Split guide rail

Step 5


Note: the cabinet can be installed left and right.
The two crossbars (tube 4) also need to be redirected.

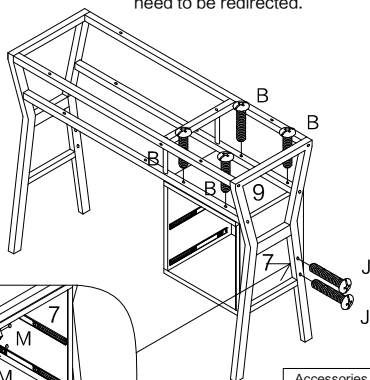

Accessories used

	MX2		BX4
			JX2


Step 6

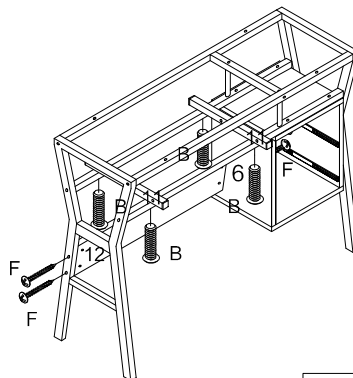


Accessories used

	BX4
	FX4


Step 7

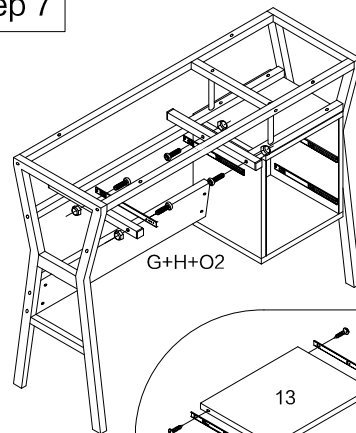

	CX4		GX4		HX4
--	-----	--	-----	--	-----

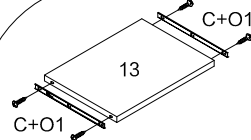


Step 8

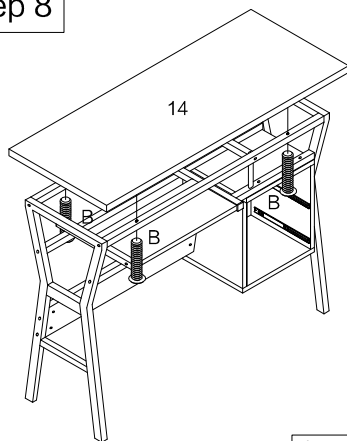

Accessories used

	BX4
--	-----

Step 9

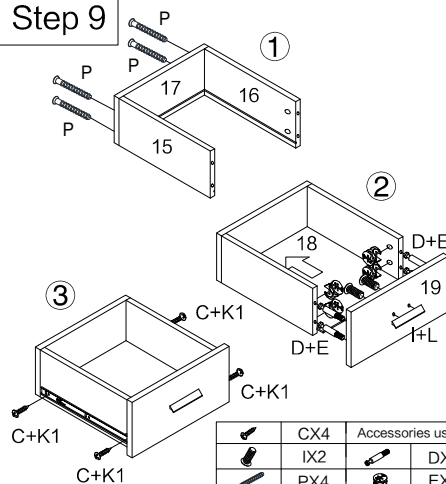

Accessories used

	CX4		DX4
	IX2		EX4
	PX4		

Complete

