


Before you begin, please follow assembly instructions carefully, then follow them step by step.


Read instruction carefully . See Furniture Parts list and Hardware List for guidance . Be sure you have all parts before you start assembling . Place and assemble furniture on a clean flat soft surface , such as carpet or rug to prevent being scratched .

P. NO : 1/1	PART LIST		QTY		HARDWARE	
	1	TOP PANEL	1	PC	A	MINIFIX
	2	BOTTOM PANEL	1	PC	A1	
	3	SIDE PANEL (L)	1	PC	A2	
	4	SIDE PANEL (R)	1	PC	A3	
	5	CENTER PANEL	1	PC		8 SETS
	6	BACK PANEL	2	PCS	B	DOWEL
	7	DOOR PANEL (L)	1	PC	C	CONFIRMAT
	8	DOOR PANEL (R)	1	PC	D	ALLEN KEY
	Hardware Pack		1	PC	E	3.5 X 18MM SCREW
						16 PCS
					H	NAIL
						15(±5) PCS
					O	PLASTIC LEG
						4 PCS
					T	HINGE (FULL OVERLAY)
						4 PCS
					AF	M4x22 HANDLE SCREW
						4 PCS
					AG	HANDLE(ZAMAK)
						2 PCS
					BG	4 X 20MM SCREW
						12 PCS

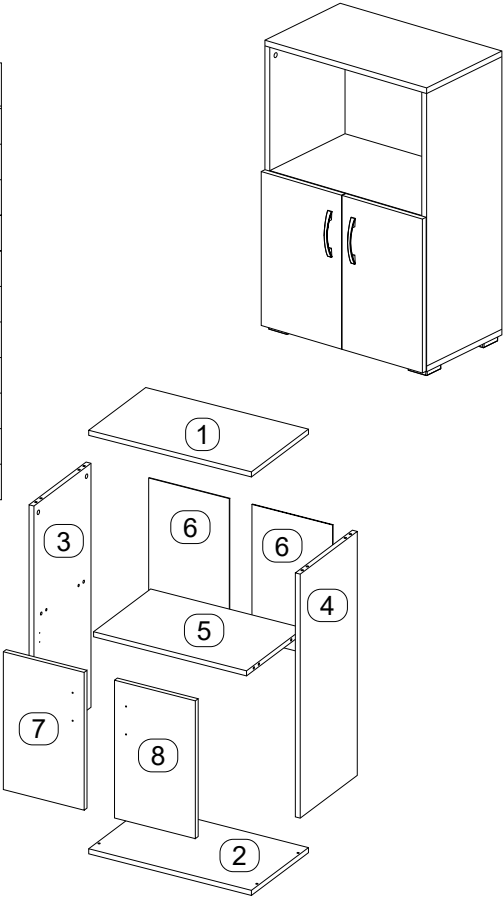


Reminder:
Please ensure that all surfaces and edges with colours/laminations are facing forward/outward.


STEP 1
Insert hardware A2 onto panel (1,3,4)
Insert hardware B onto panel (1,3,4)

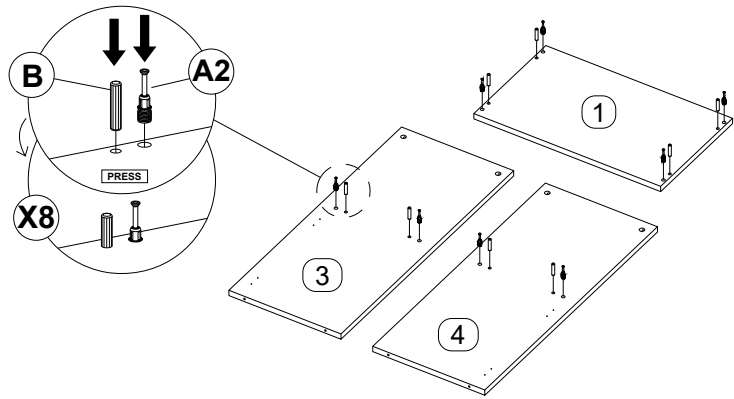


STEP 2
Attach panel (3,4) to panel (5).
Insert hardware A1 onto panel (5).
Rotate all A1 until tight.
Apply A3 onto all A1 by hand.

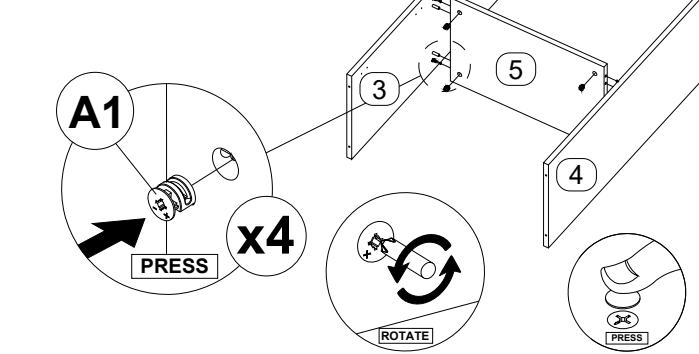

STEP 3
Attach panel (1) to panel (3,4).
Insert hardware A1 onto panel (3,4).
Rotate all A1 until tight.
Apply A3 onto all A1 by hand.

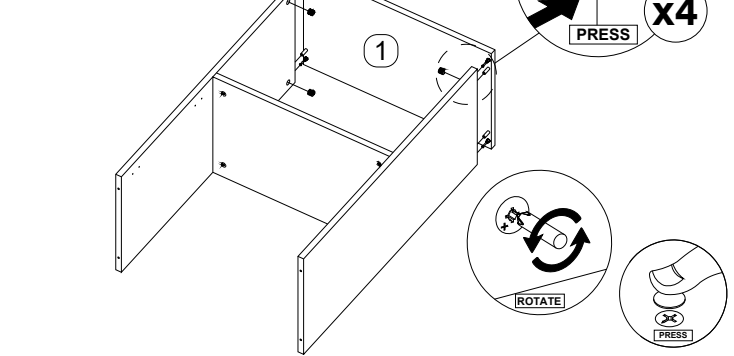


STEP 4
Connect bottom panel to side panels by using hardware C.

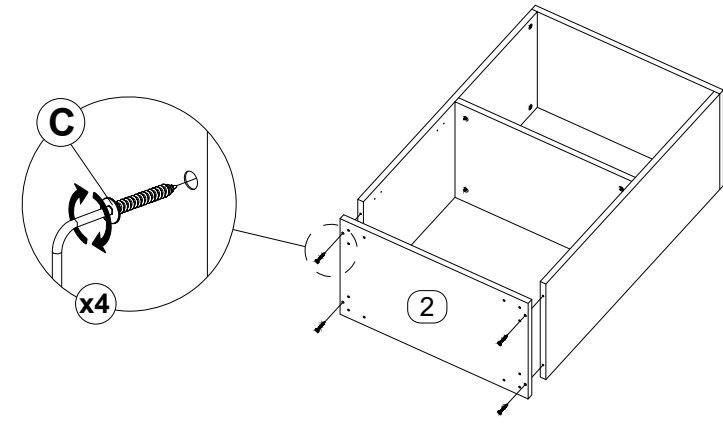


STEP 5

Fix hardware O under panel(2) by using hardware BG.

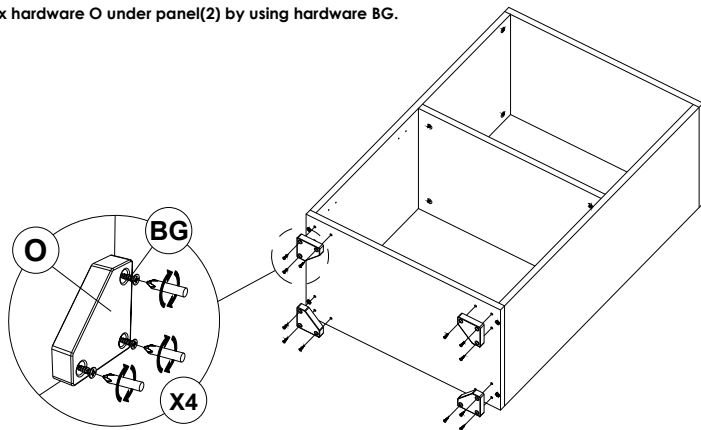


STEP 6

Connect back panel (6) to entire body with nail(H).

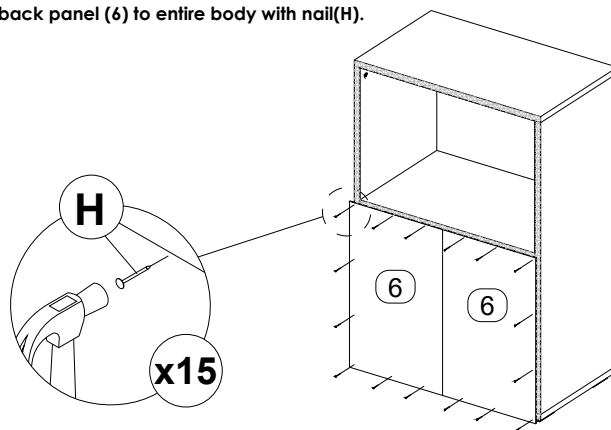

STEP 7

Connect hinge(T) to panel(7,8) by using hardware E.
Connect handle(AG) to panel(7,8) by using hardware AF.

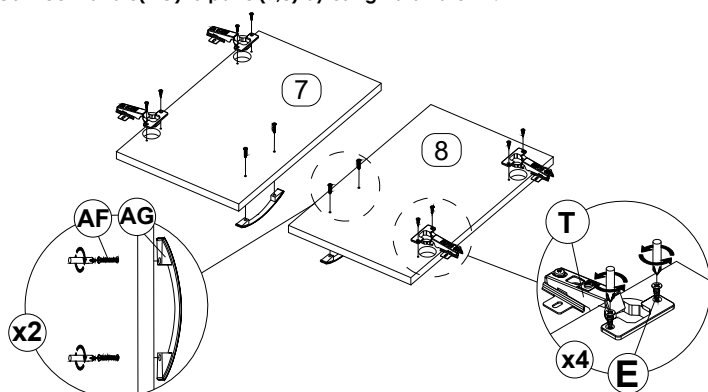

STEP 8

Connect door panel(7,8) to side panel(3,4) by using hardware E.

