


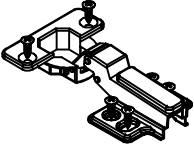


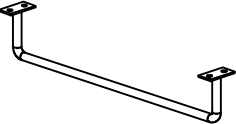
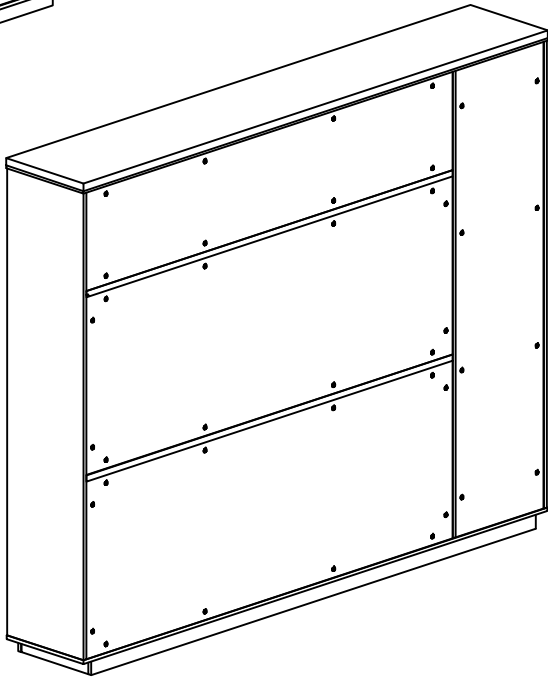


Minifix Screw  X92A	Half overlay hinge  X4F
Minifix  X92B	Whole overlay hinge  X9G
Wood Minifix  X28C	Screw 4*20  X4H
Shelves fix screw  X12D	Clothes rail  X1I
Screw 3.5*14  X78E	

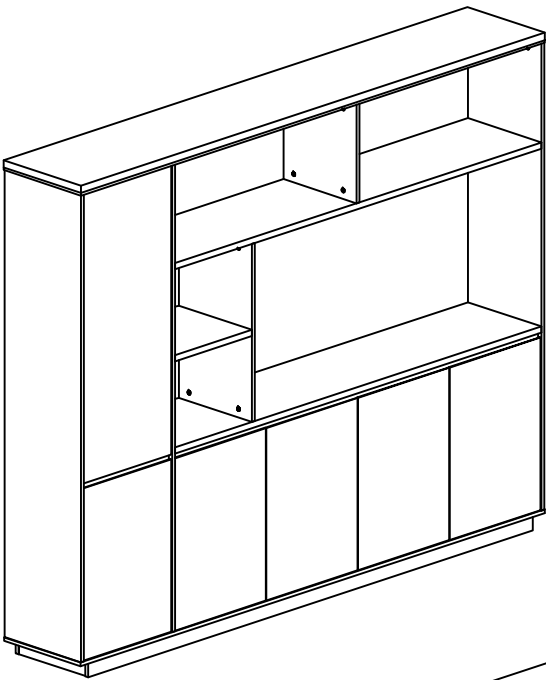


STEP:1

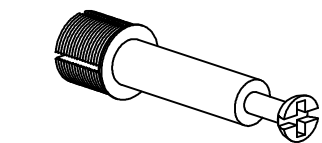


X22

A

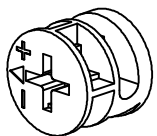


X22

B




X3

C

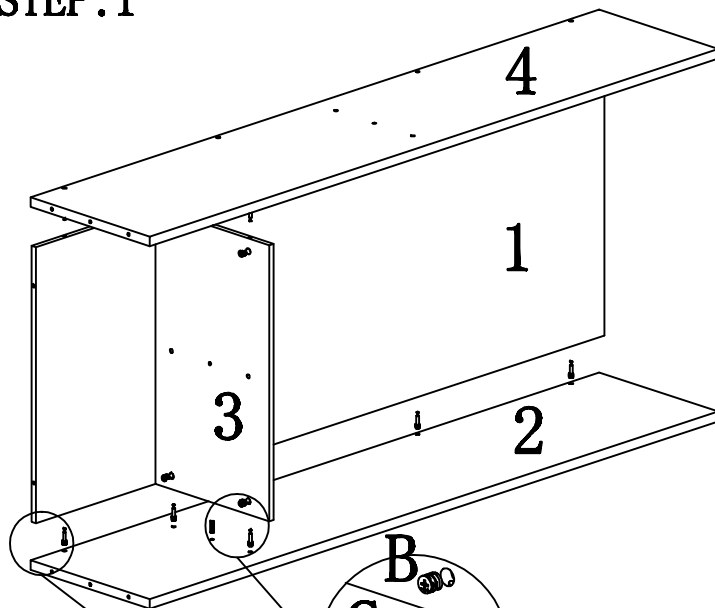


To fix the panel 1 and 2, then fix the panel 3 and 4

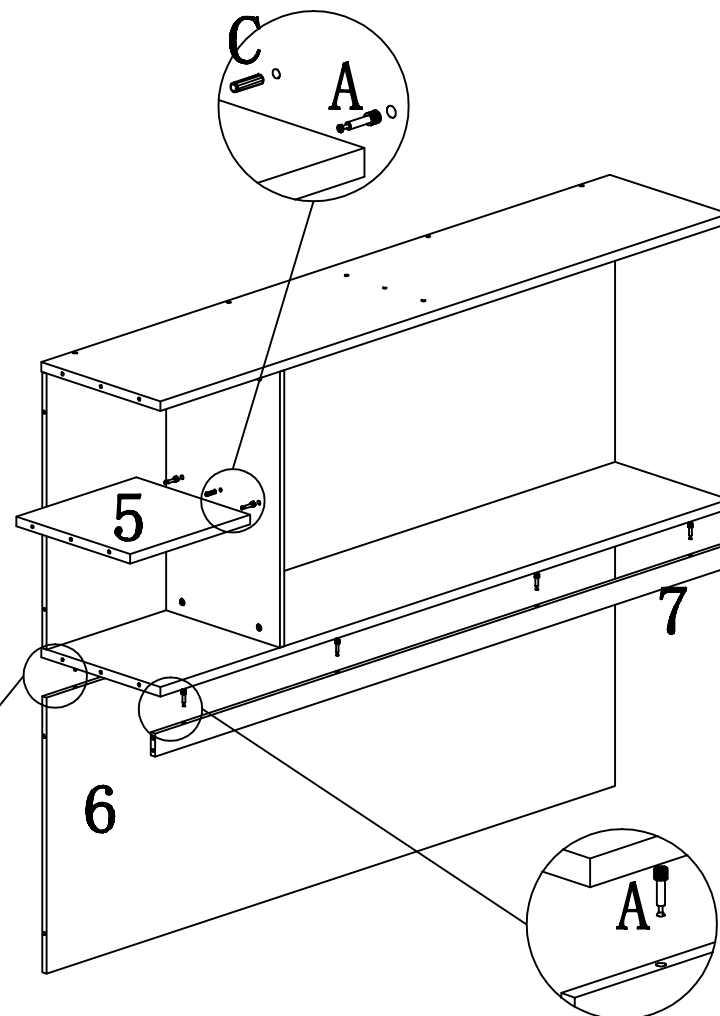

To fix the panel 5 ,6 and 7


STEP:2

To fix the panel 8,9 and 10

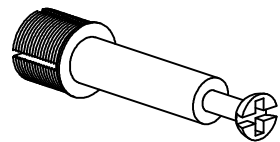


X12

A

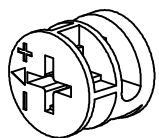


X12

B




X10

C

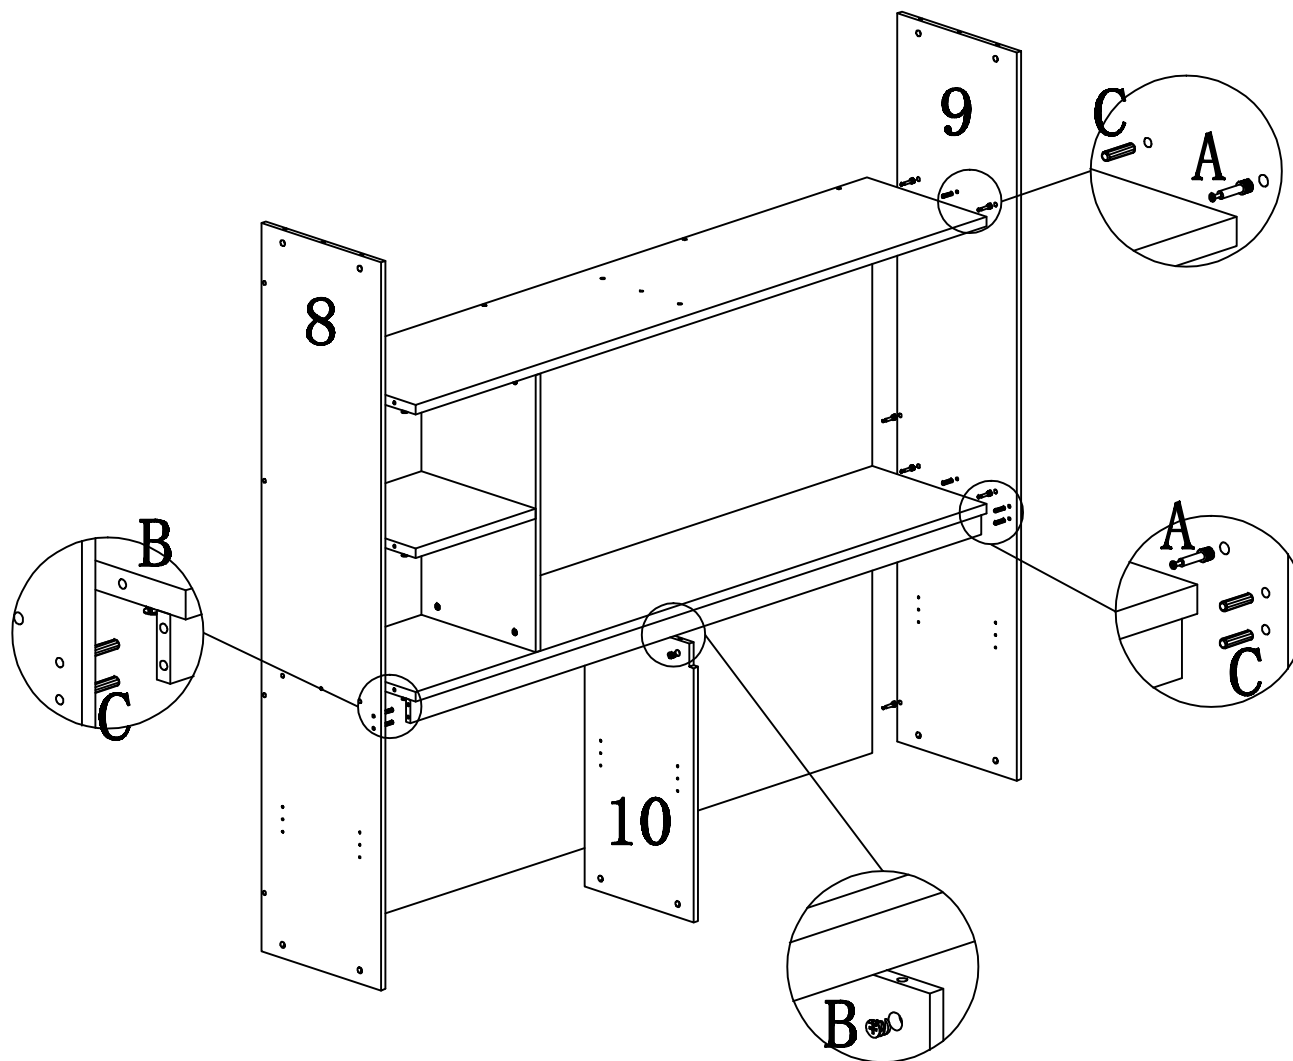


STEP:3

To fix the panel 11
12,13,14

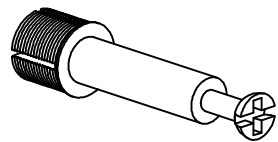


X12

A

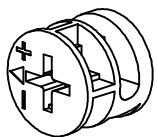


X12

B




X6

C

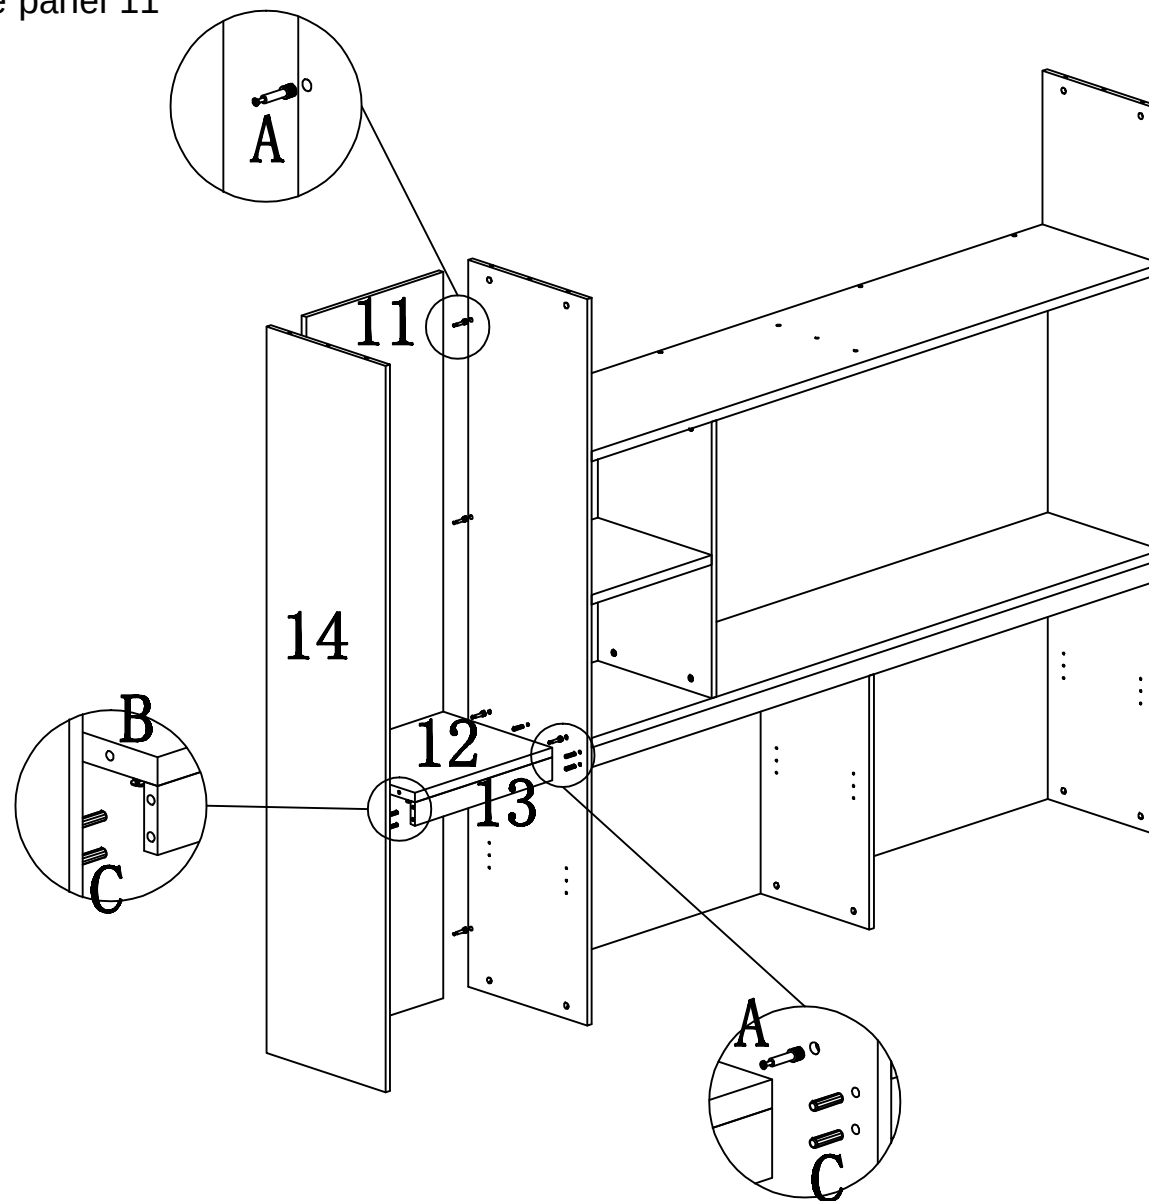


STEP:4

To fix the panel 15,16 and 17

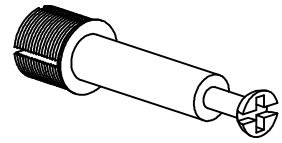


X34

A

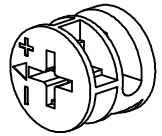


X34

B







X5

C

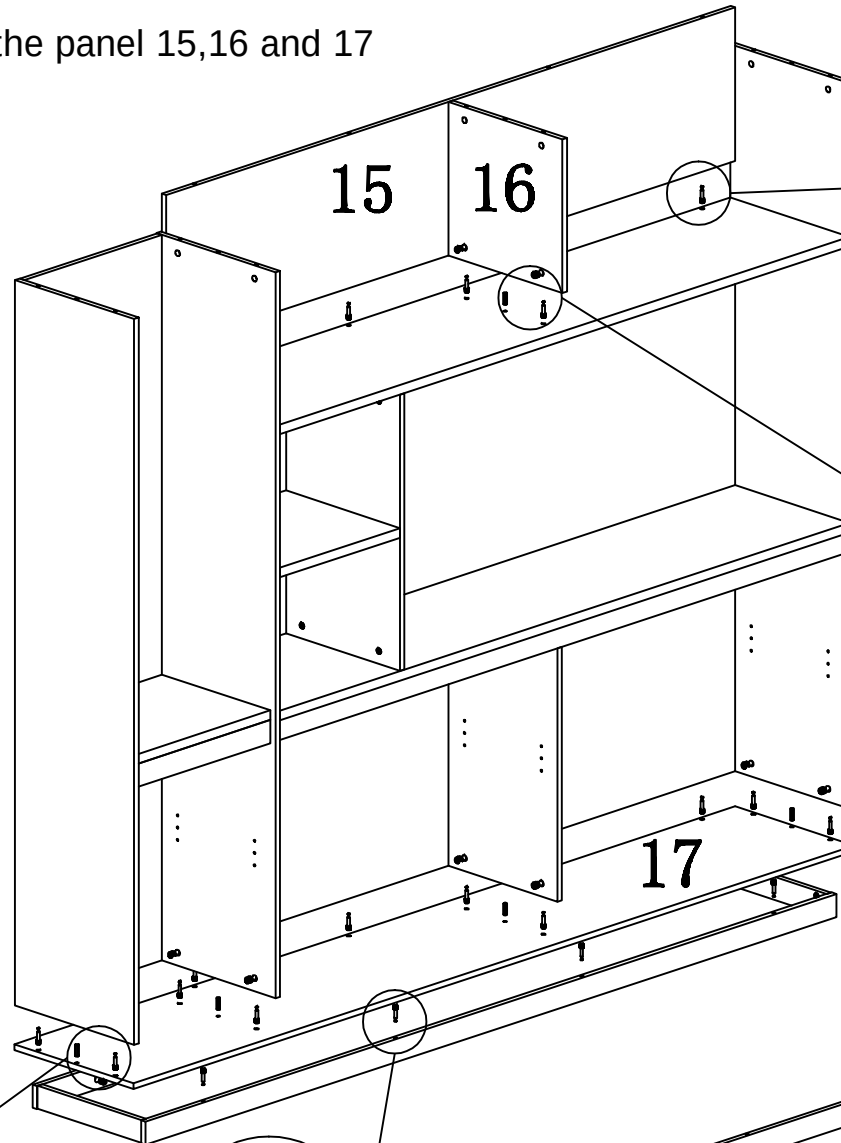


To fix the bottom support panel 18 and 19

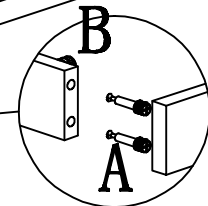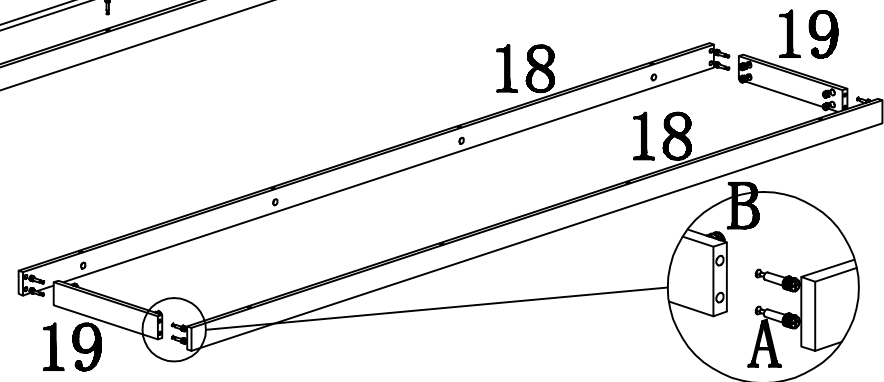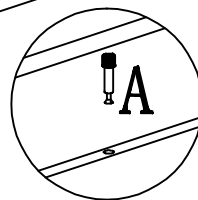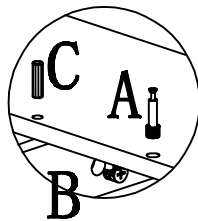


STEP:5

To fix the top panel 20

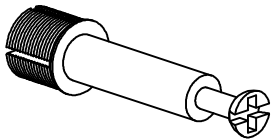


X12

A

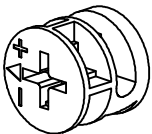


X12

B




X4

C

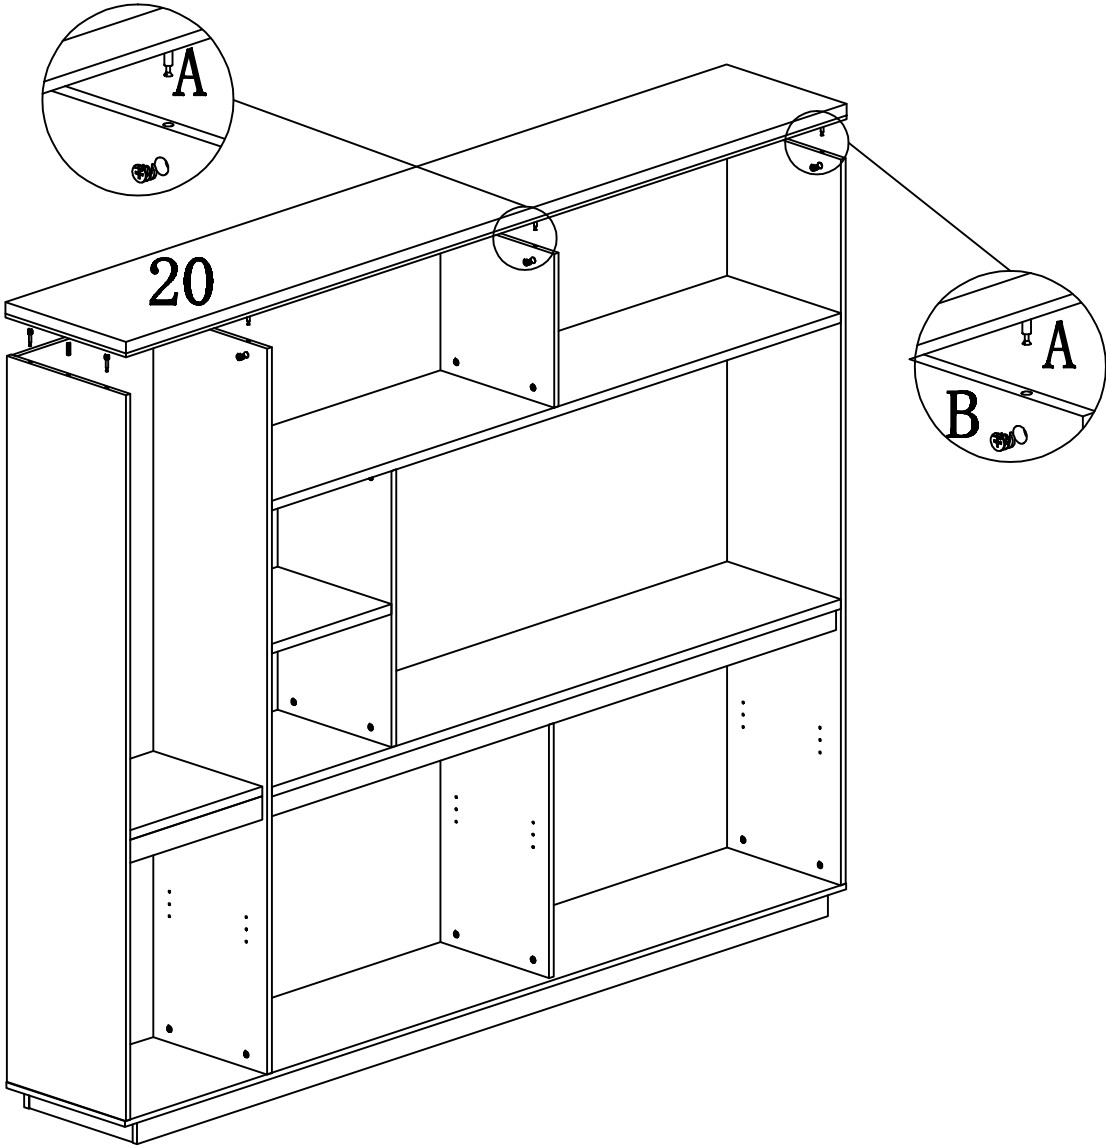

STEP:6


To fix the clothes rail I



X12


D

4*20






X4

H

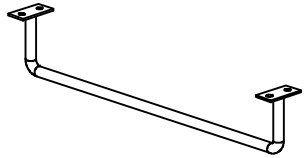

X1


I

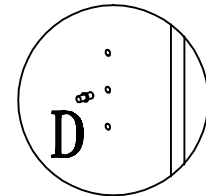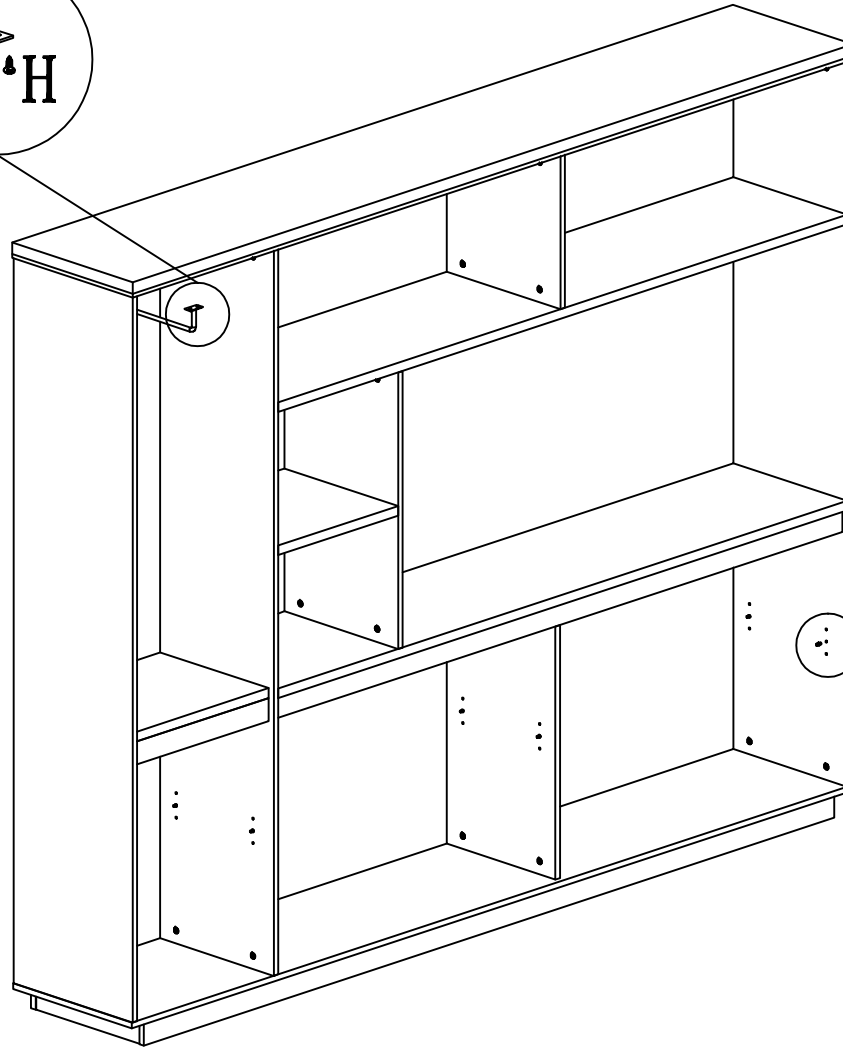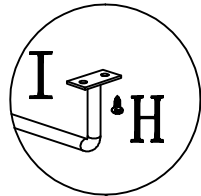

3. 5*14STEP:7


FINISH

To fix the door hinge on panel ,final to fix the door in cabinet




X78

E

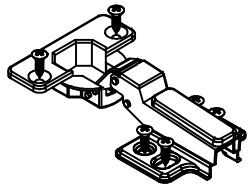

X4

F



X9

G

