




361-000110

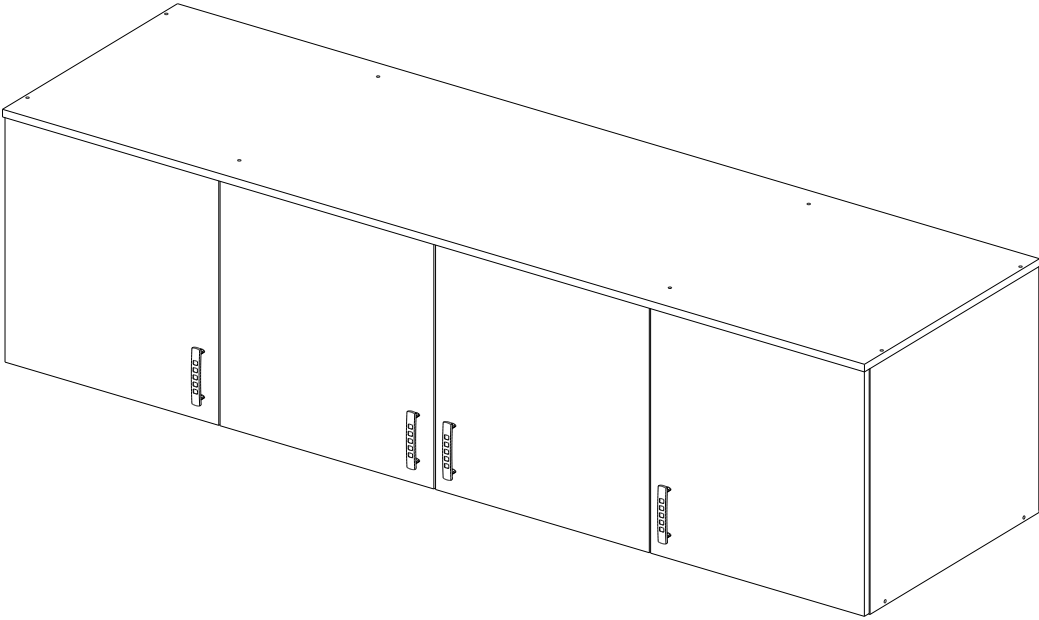

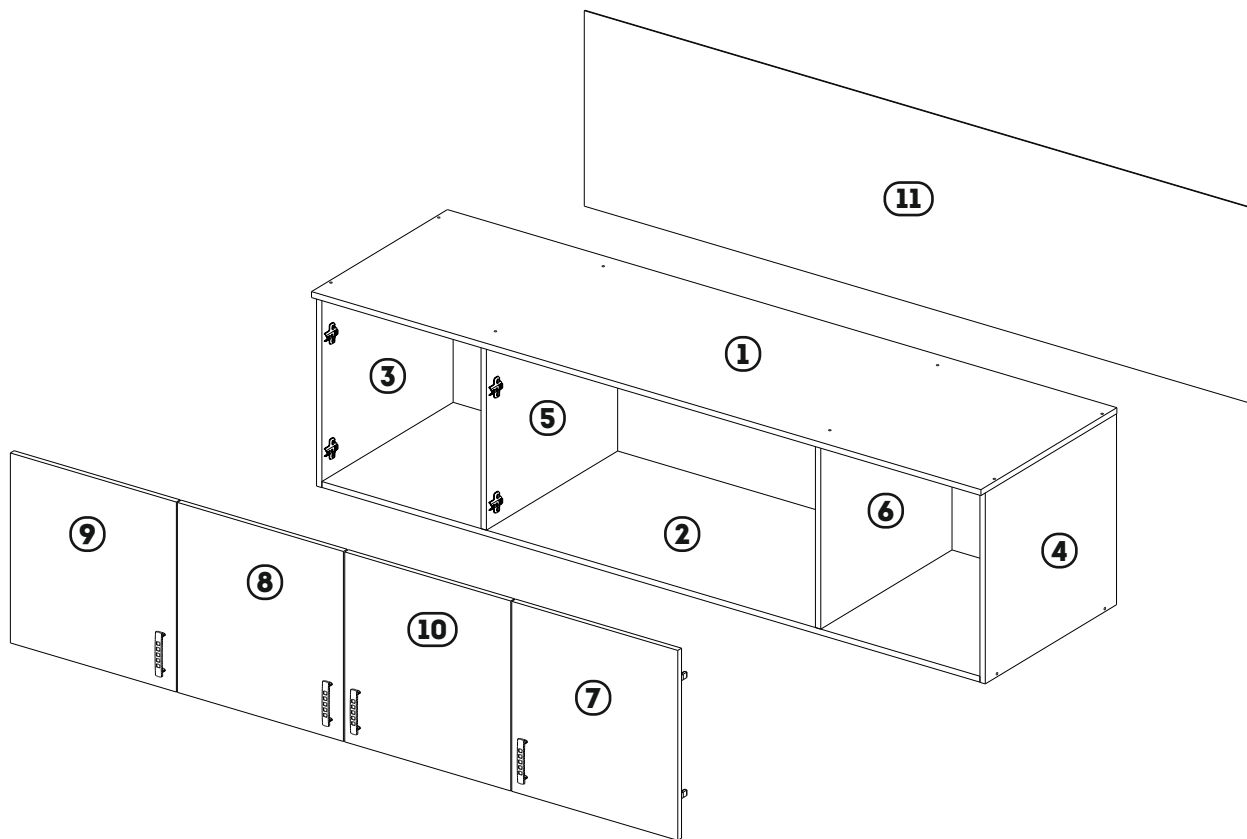


Nº	a*b	X	Pack
1	2000x580	1	1
2	1966x560	1	1
3	517x560	1	1
4	517x560	1	1
5	500x560	1	1
6	500x560	1	1
7	513x496	1	2
8	513x496	1	2
9	513x496	1	2
10	513x496	1	2
11	528x1994	1	1


Mounting Plate




Full Overlay Hinge




Half Overlay Hinge




Confirmat

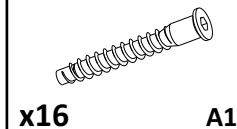

Cap for confirmate

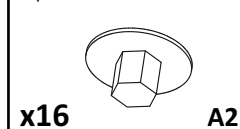


Confirmation Key

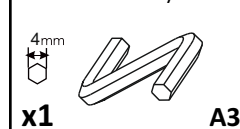


Nail
1x16




Screw
3,5x16







Screw
3,5x30



Plastic Handle
96 mm



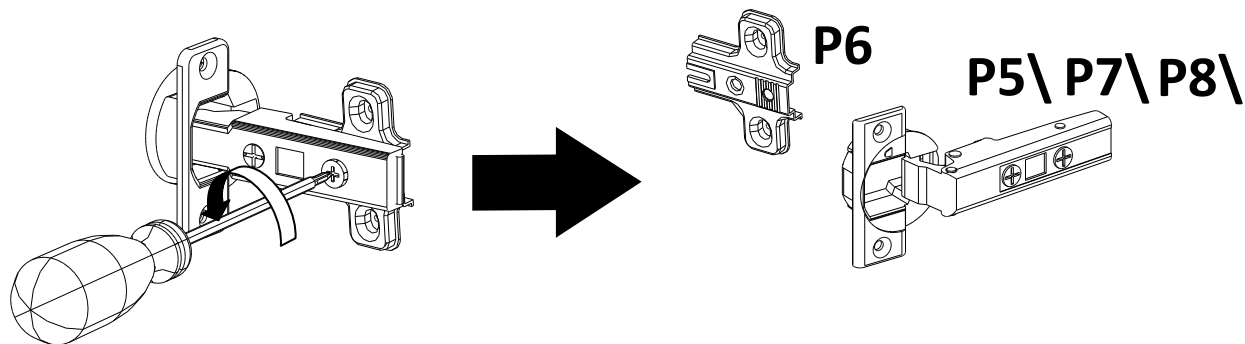

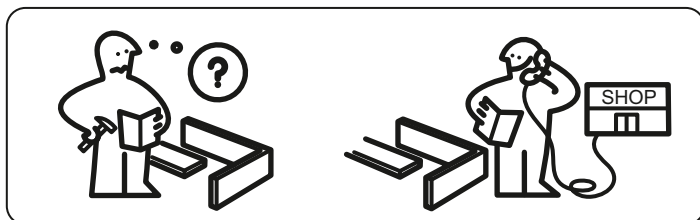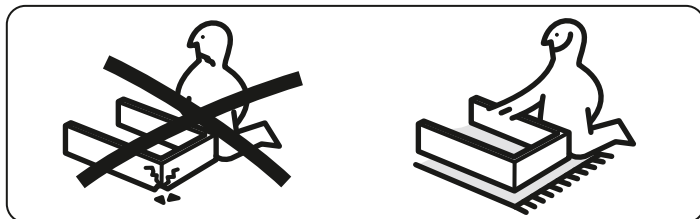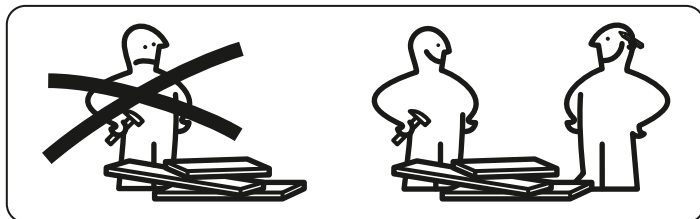

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.


CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1

Mounting Plate


x8








P6

Screw
3,5x16

x16




W1

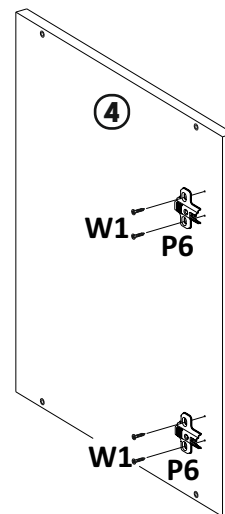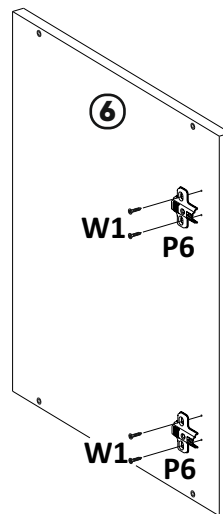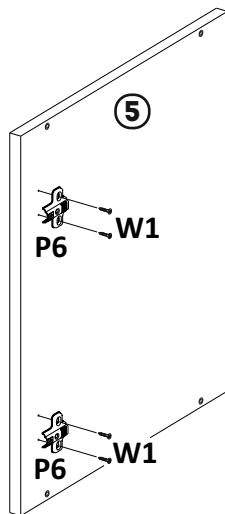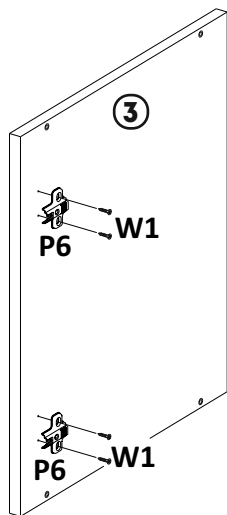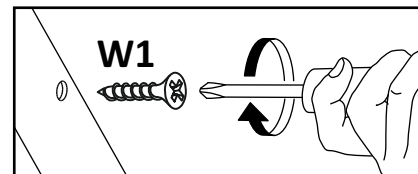



2

Confirmat




x4

A1

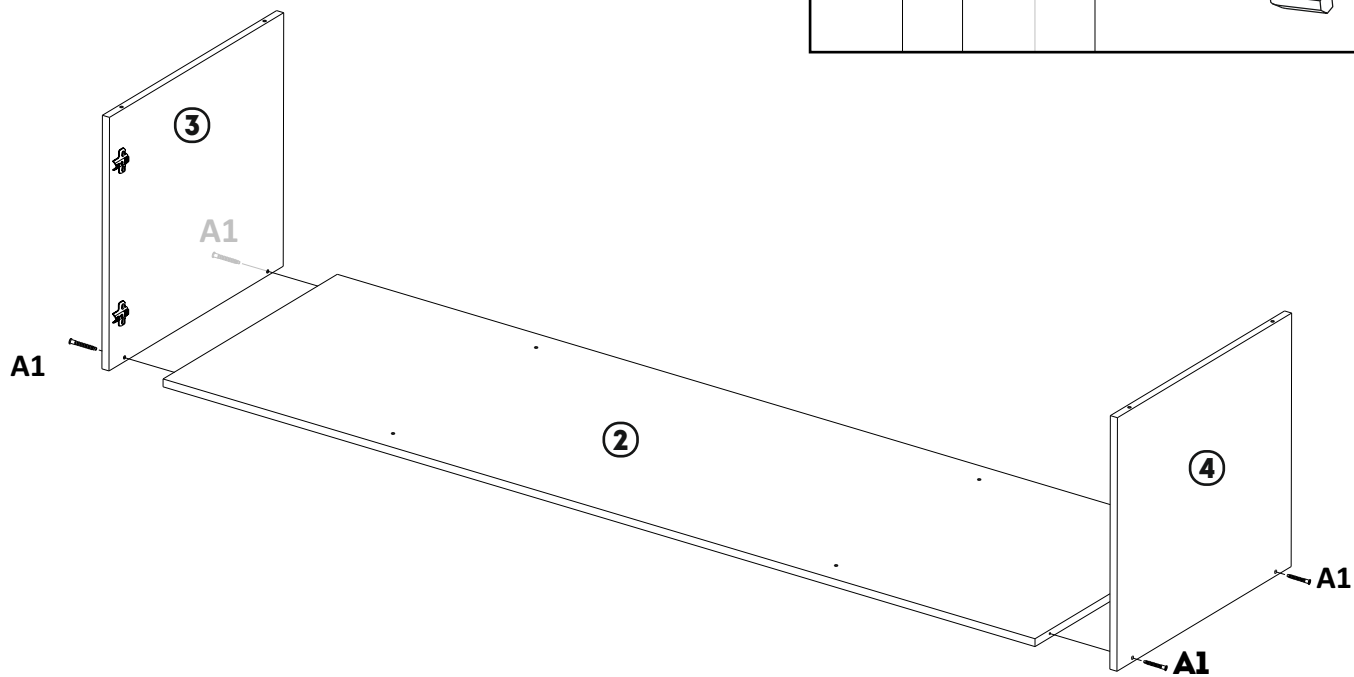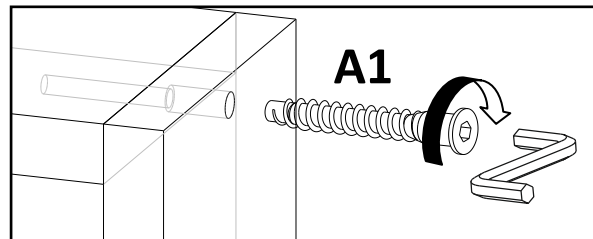



3

Confirmat




x12

A1

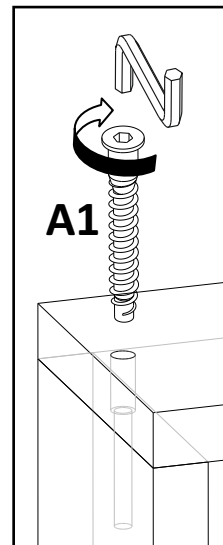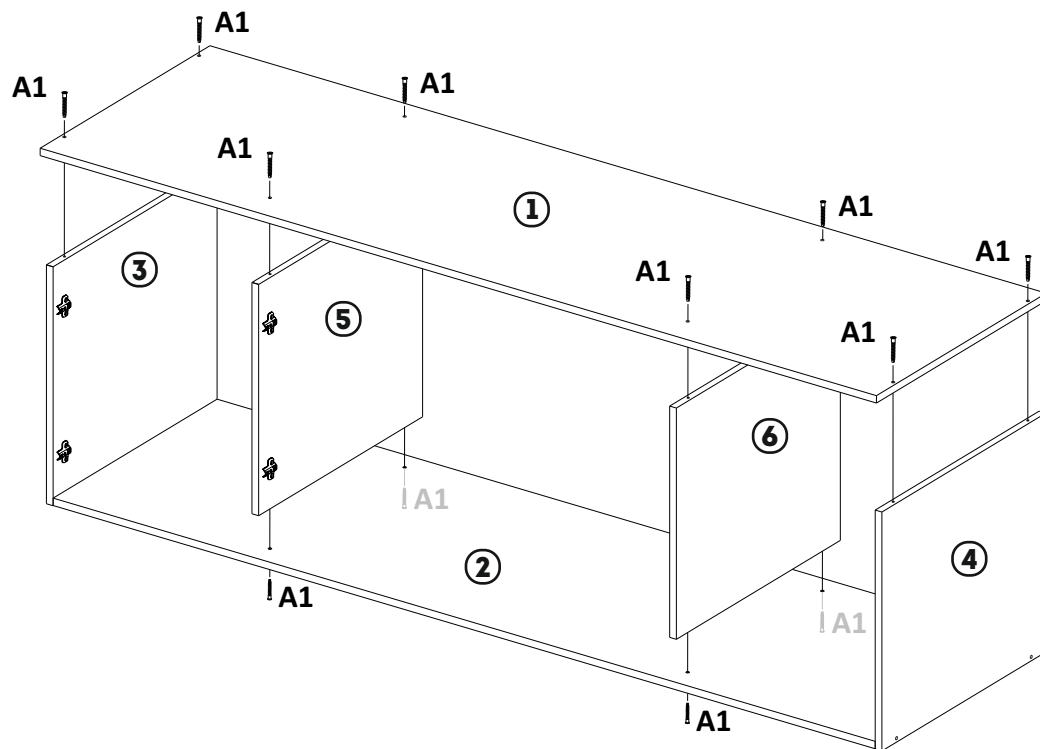


4

Nail
1x16




x40

K1

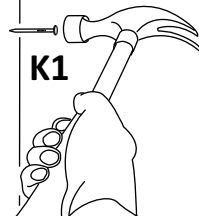


K1

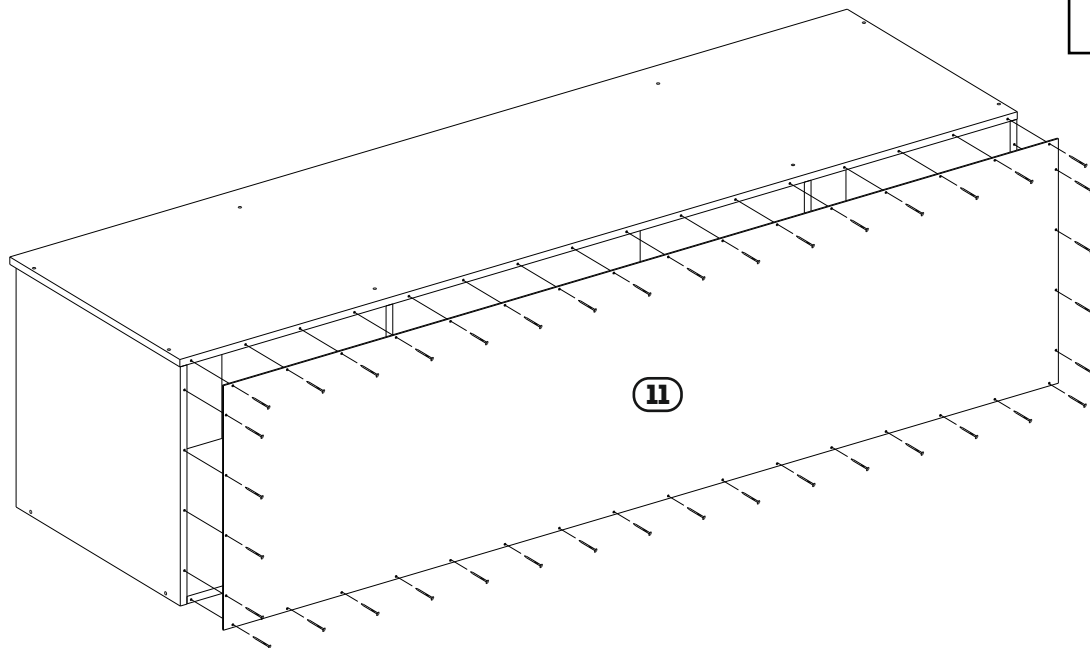

5


Full Overlay Hinge



x4

P5


Half Overlay Hinge



x4

P7


Screw
3,5x16



x16

W1


Screw
3,5x30



x8




W3

Plastic Handle
96 mm







x4

RP 1

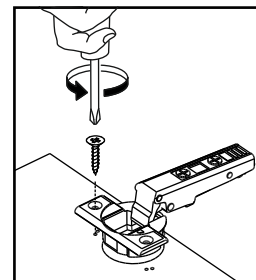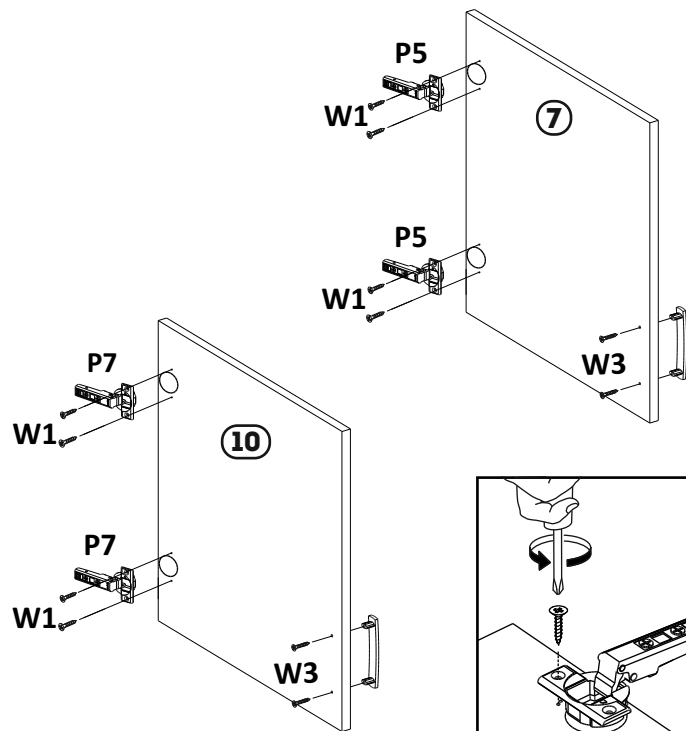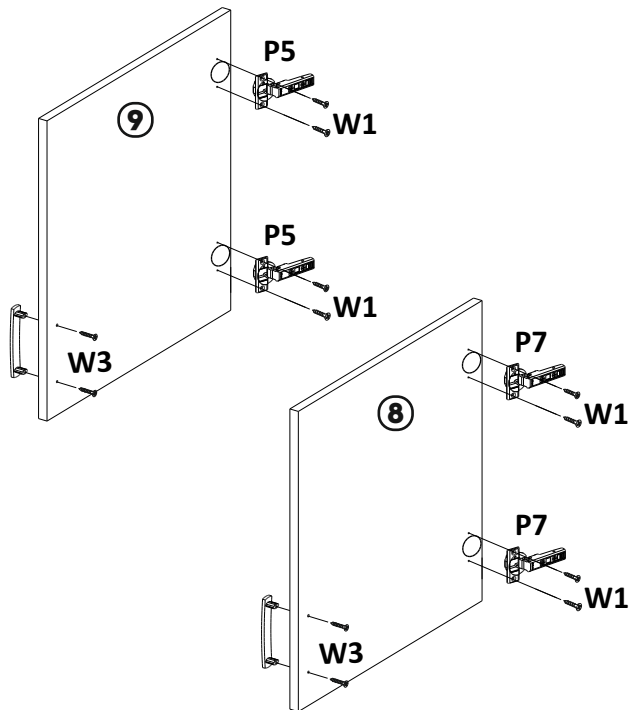


6

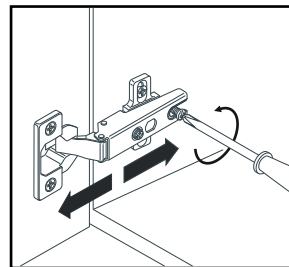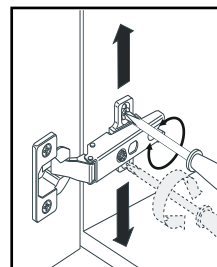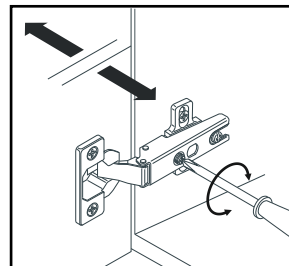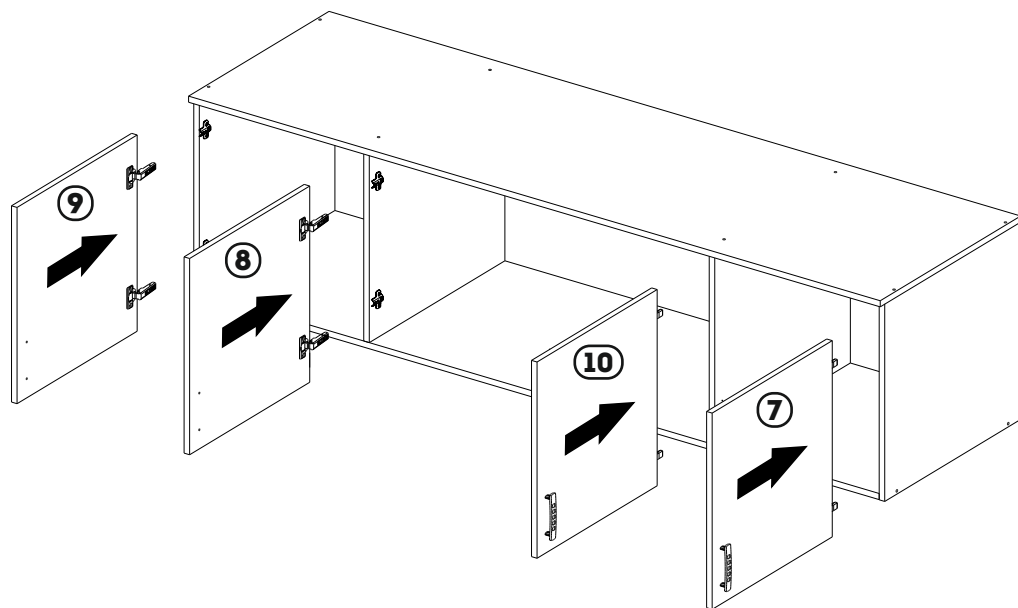



Screw
3,5x30



x6

W3

