

ASSEMBLY INSTRUCTIONS


383-000089




IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

1. MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH.
2. DO NOT USE DETERGENT OR CHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT.
3. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.
4. DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.
5. USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.
6. BEFORE STARTING ASSEMBLY PLEASE VERIFY IF ALL PARTS AND HARDWARE ARE INCLUDED.

HARDWARE LIST			QTY (pcs)
DW4		Wood Dowel 6 x 25mm	38
LG1		Leg Pin	7
MF1		Alley Key	1
MN2		Mini Fix 15mm	9 Sets
PF11		Small L Bracket	6
SC3		Screw M3.5 x 14mm	12
SC13		Screw M4 x 30mm	10
SC24		JCBCW M6 x 50mm	4
SC25		FH Screw M5 x 40mm	14

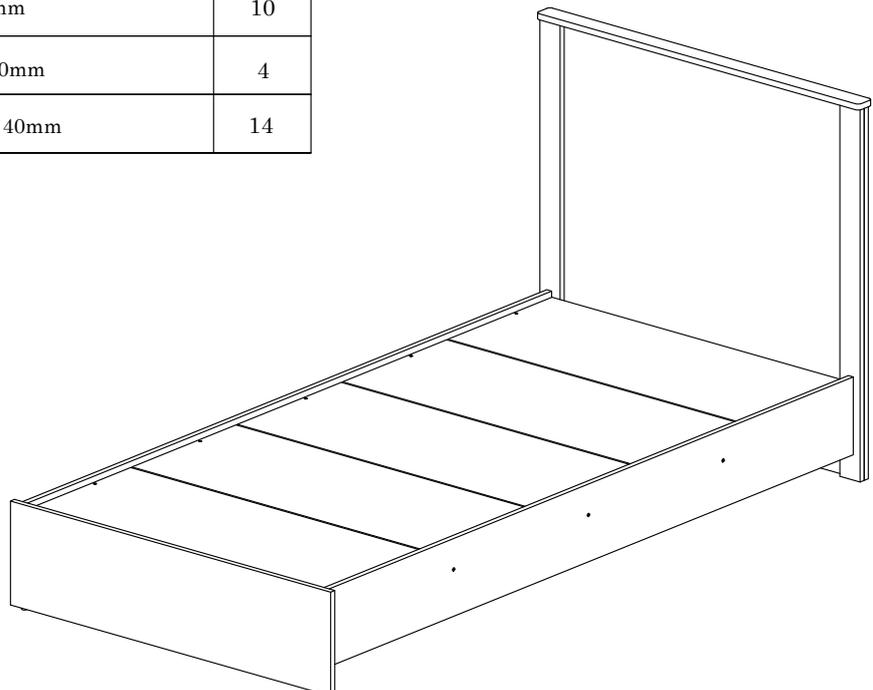


Parts List		QTY
A	Head Board	1 pc
B	Foot Board	1 pc
C	Head-Top Panel	1 pc
D	Head-Crossbar Panel	2 pcs
E	Bed Base Panel	5 pcs
F	Side Panel (L)	1 pc
G	Side Panel (R)	1 pc
H	Center Panel	1 pc
I	Small Center Crossbar	6 pcs
J	Small Wood	8 pcs

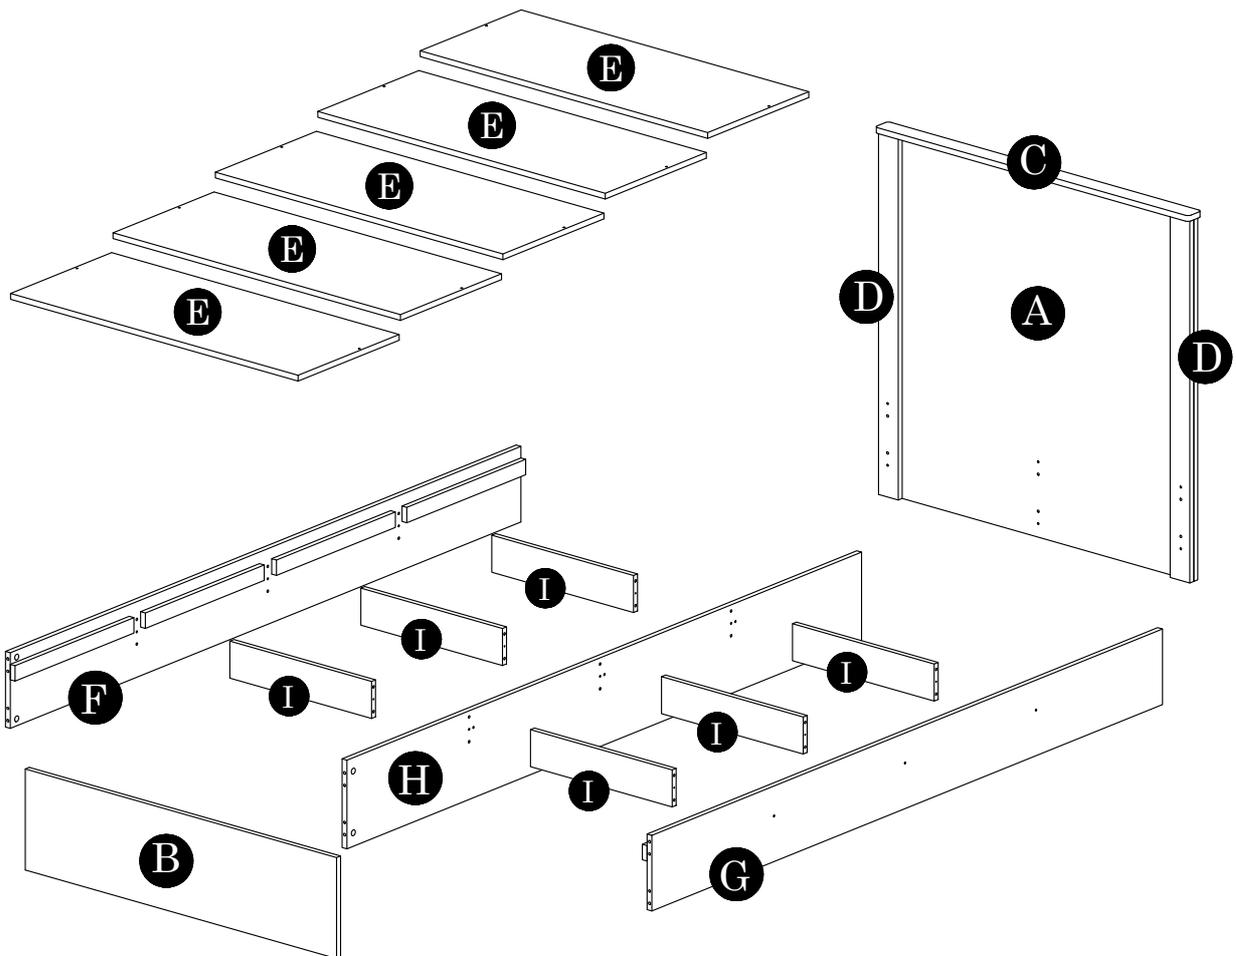


STEP 1

DW4		Wood Dowel 6 x 25mm	2
LG1		Leg Pin	2
MN2		Mini Fix 15mm	3 Sets

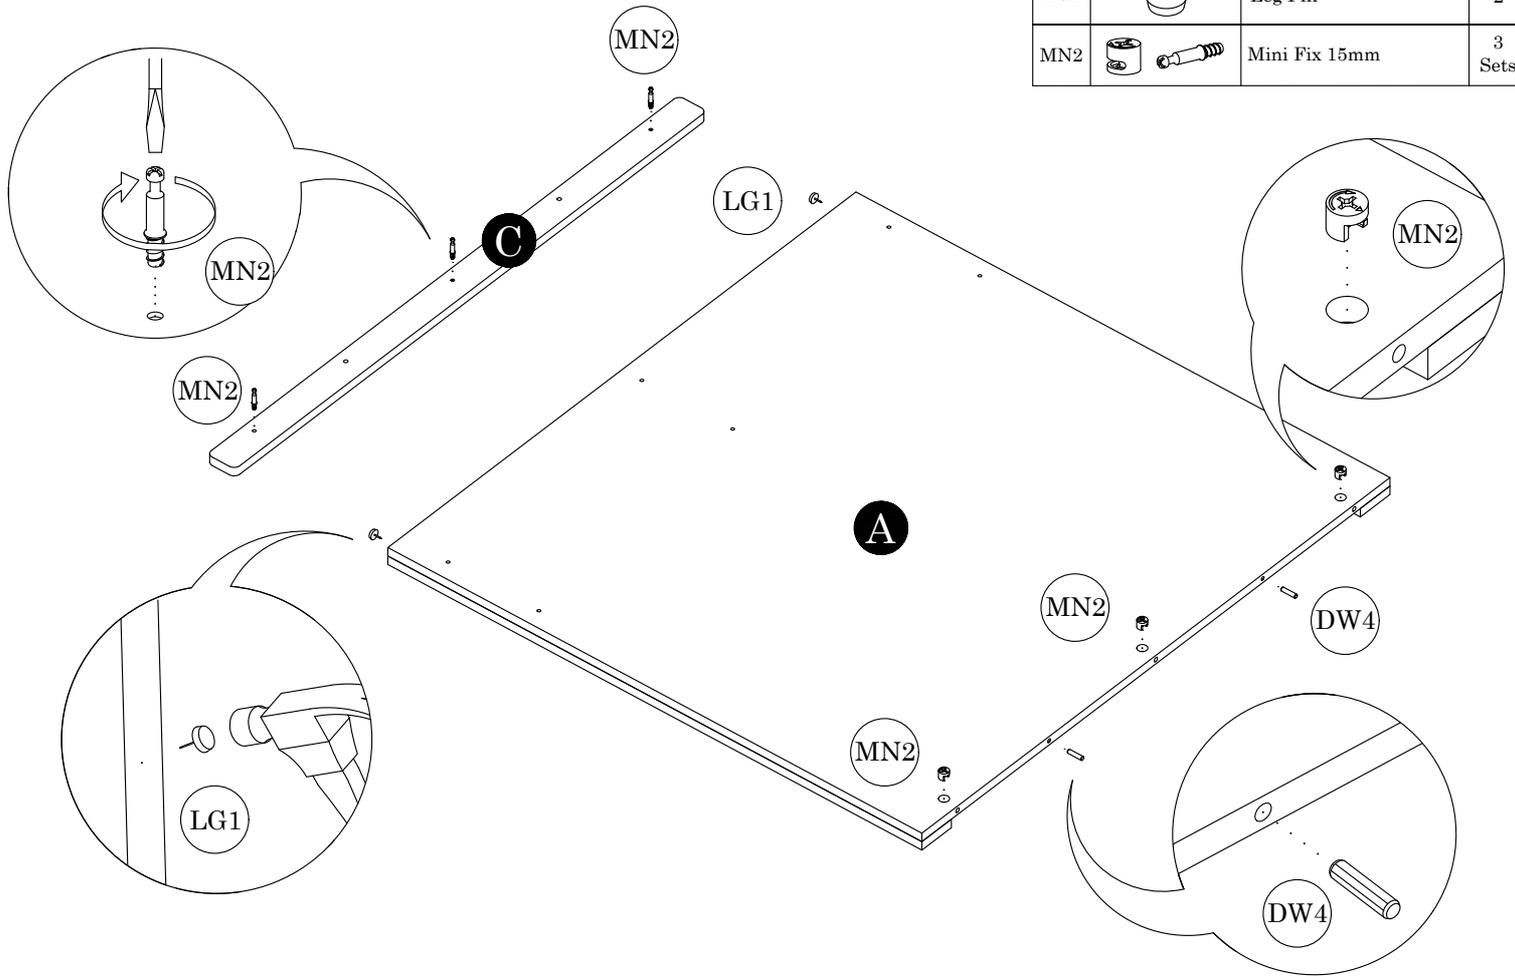


STEP 2

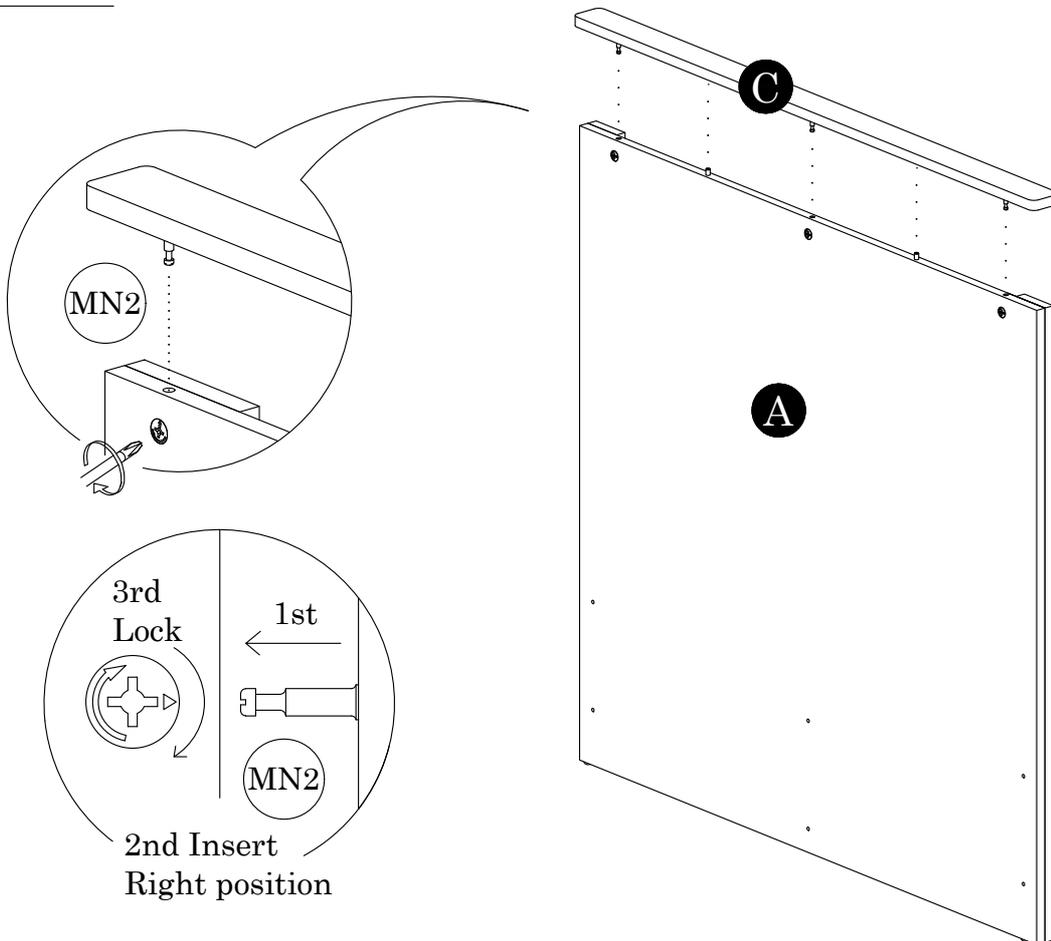


STEP 3

DW4		Wood Dowel 6 x 25mm	12
LG1		Leg Pin	3
MN2		Mini Fix 15mm (Cam)	6

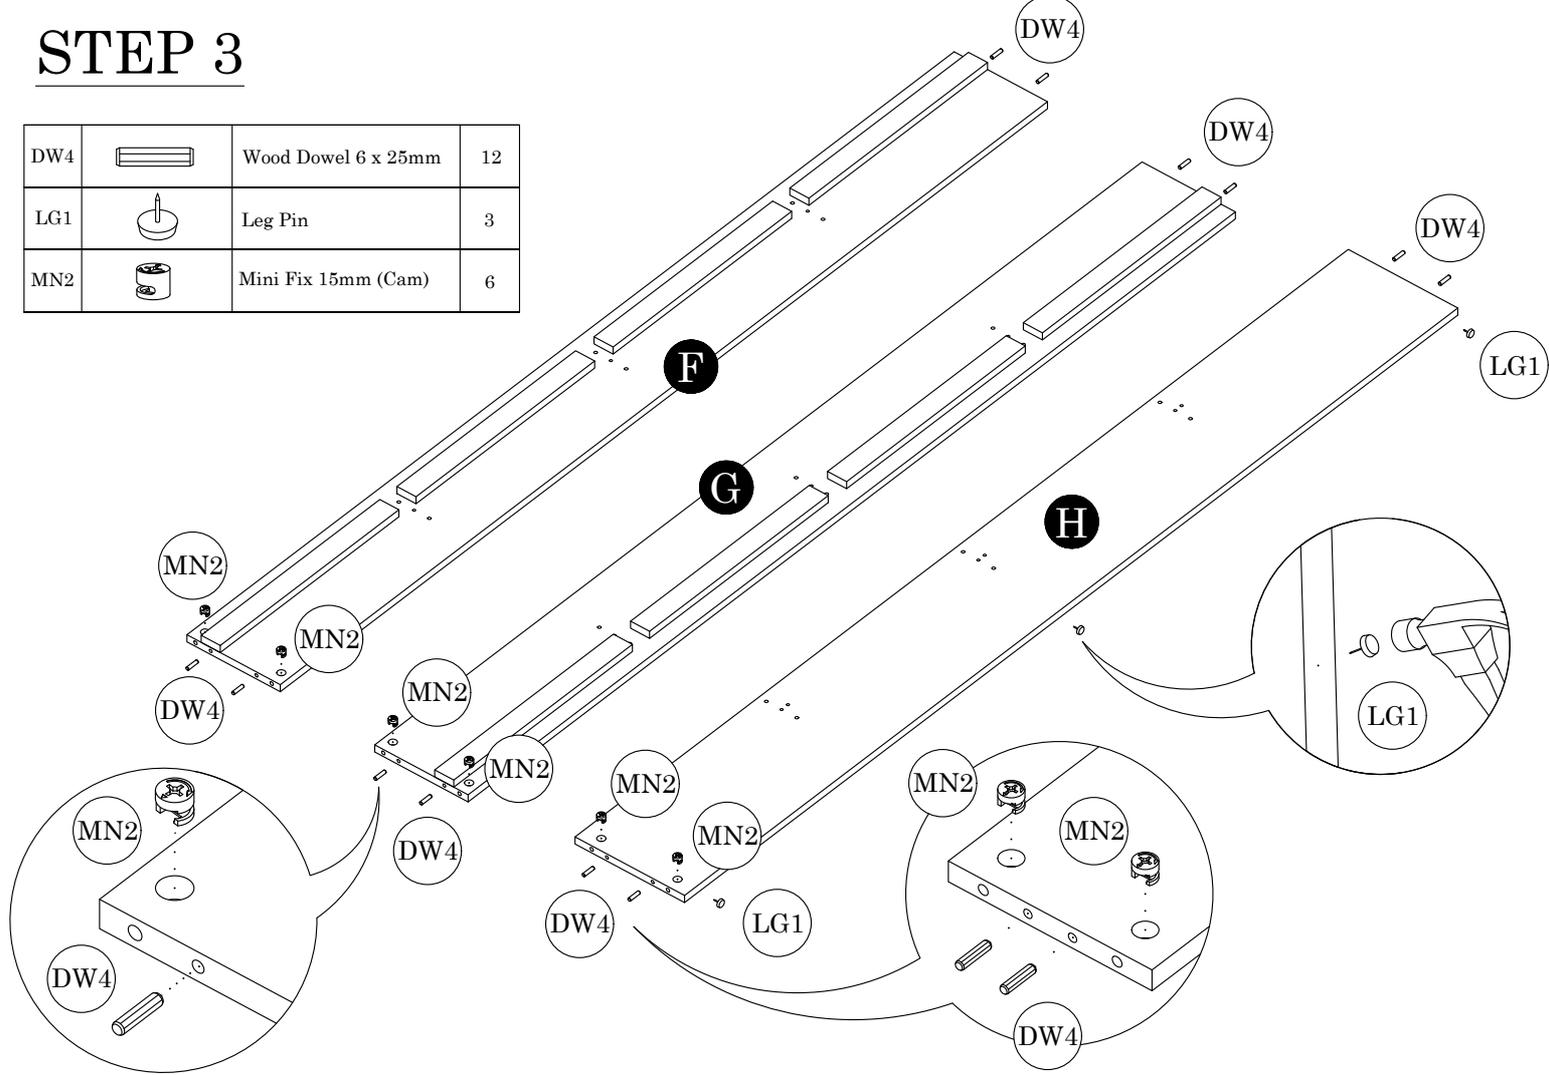


STEP 4


DW4		Wood Dowel 6 x 25mm	24
LG1		Leg Pin	2
MN2		Mini Fix 15mm (Bolt)	6

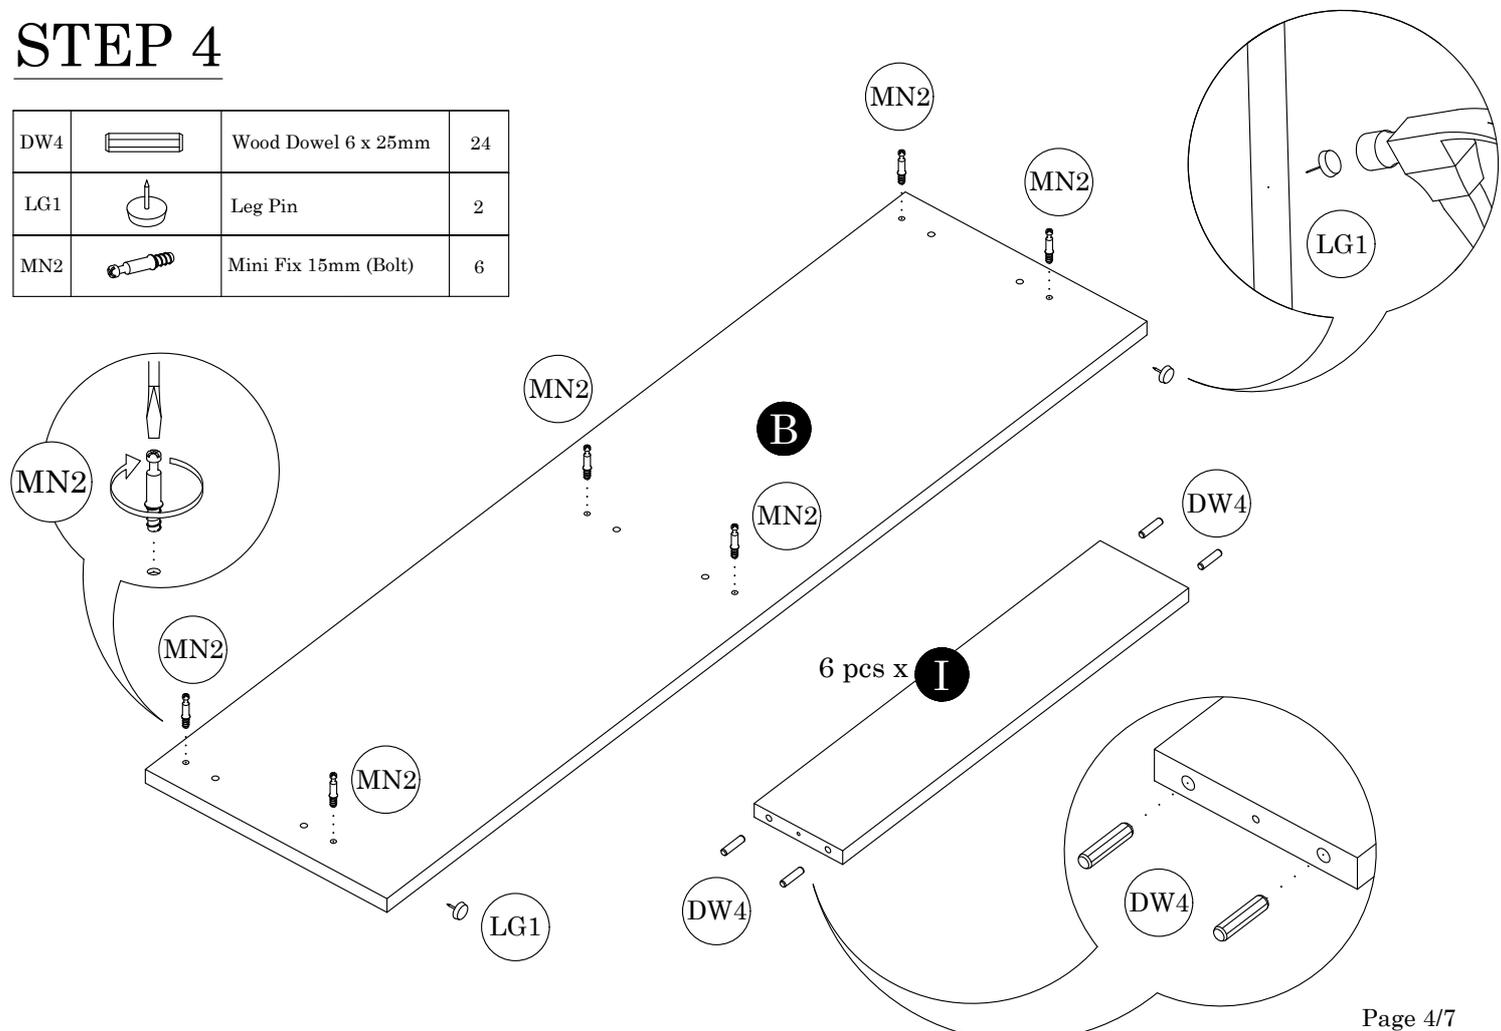

STEP 5

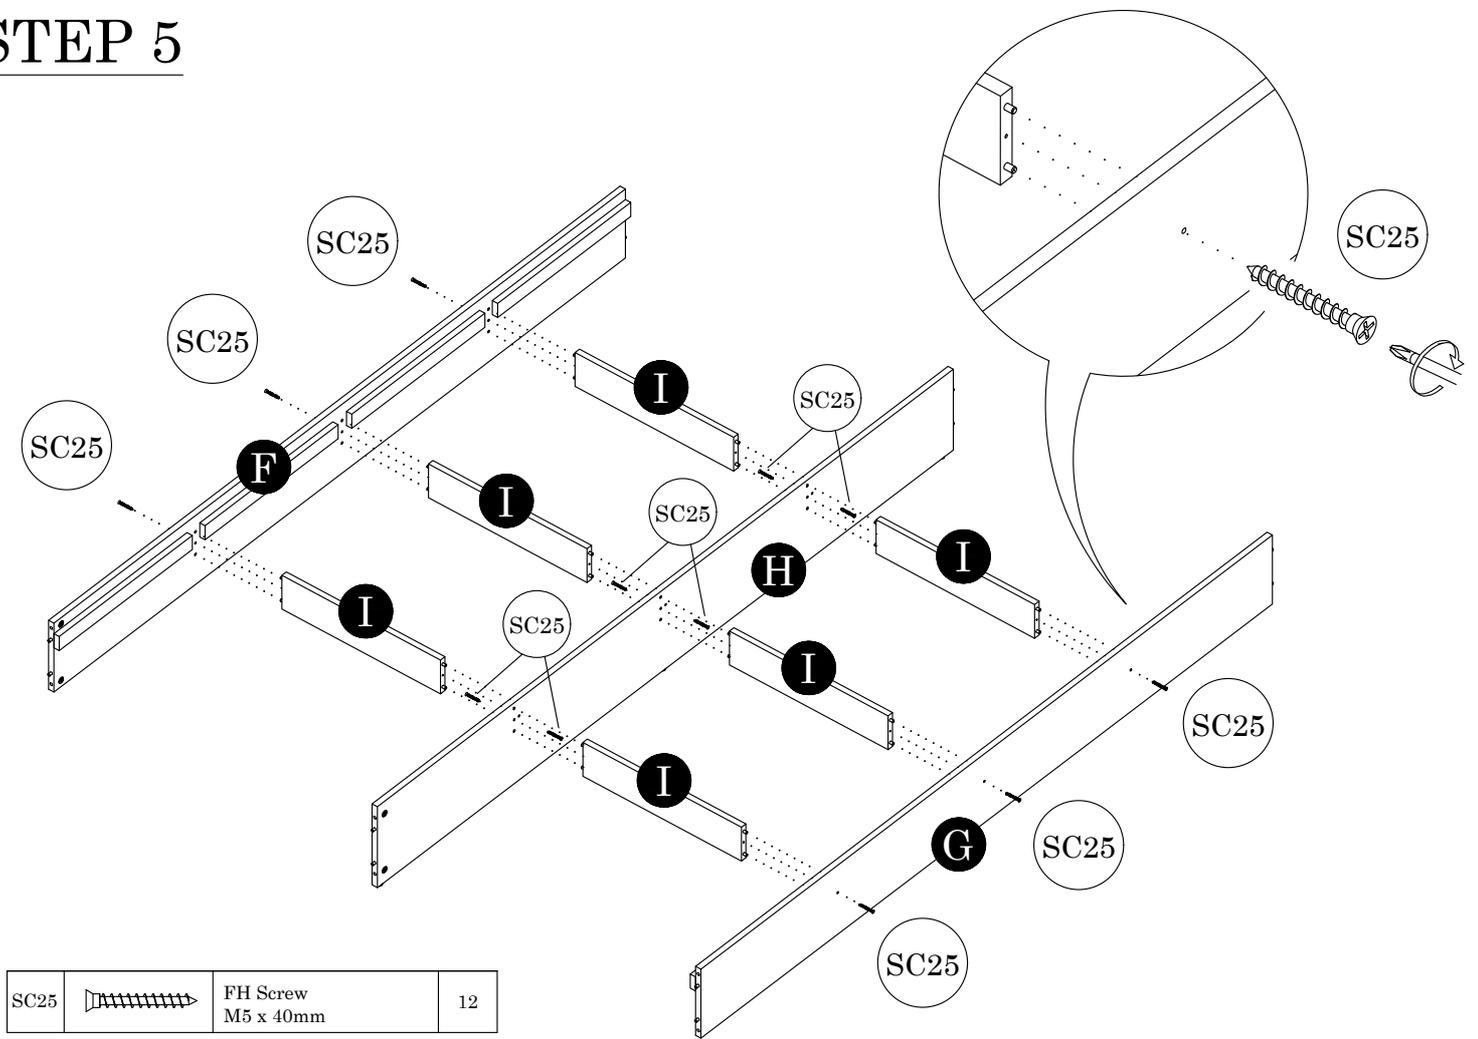


STEP 6

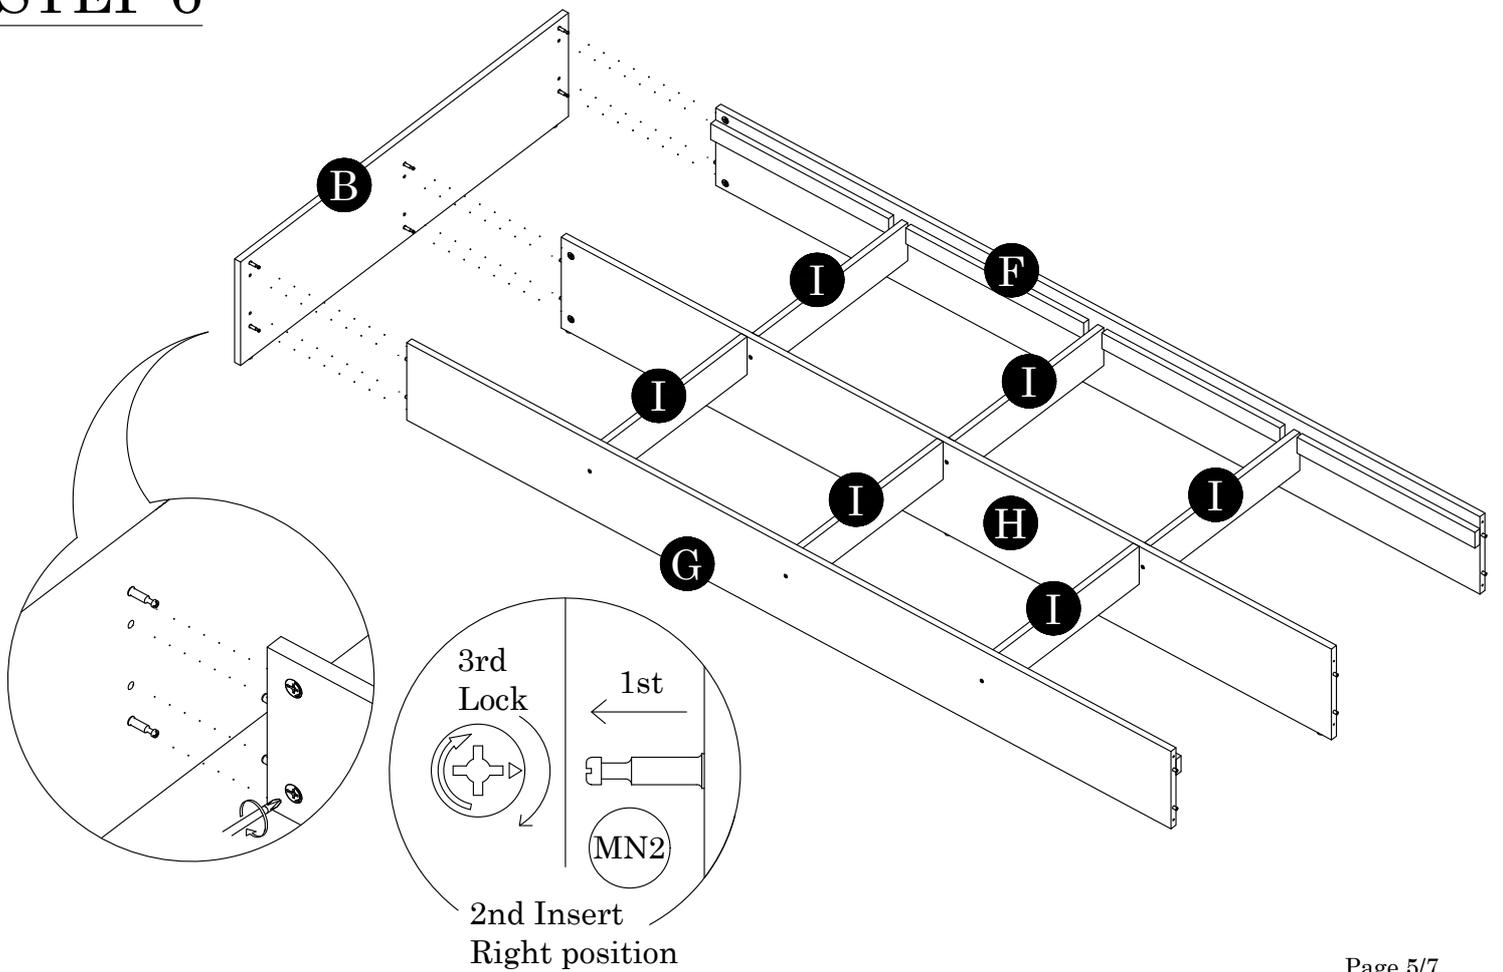


STEP 7

MF1		Allen Key	1
SC24		JCBC M6 x 50mm	4
SC25		FH Screw M5 x 40mm	2

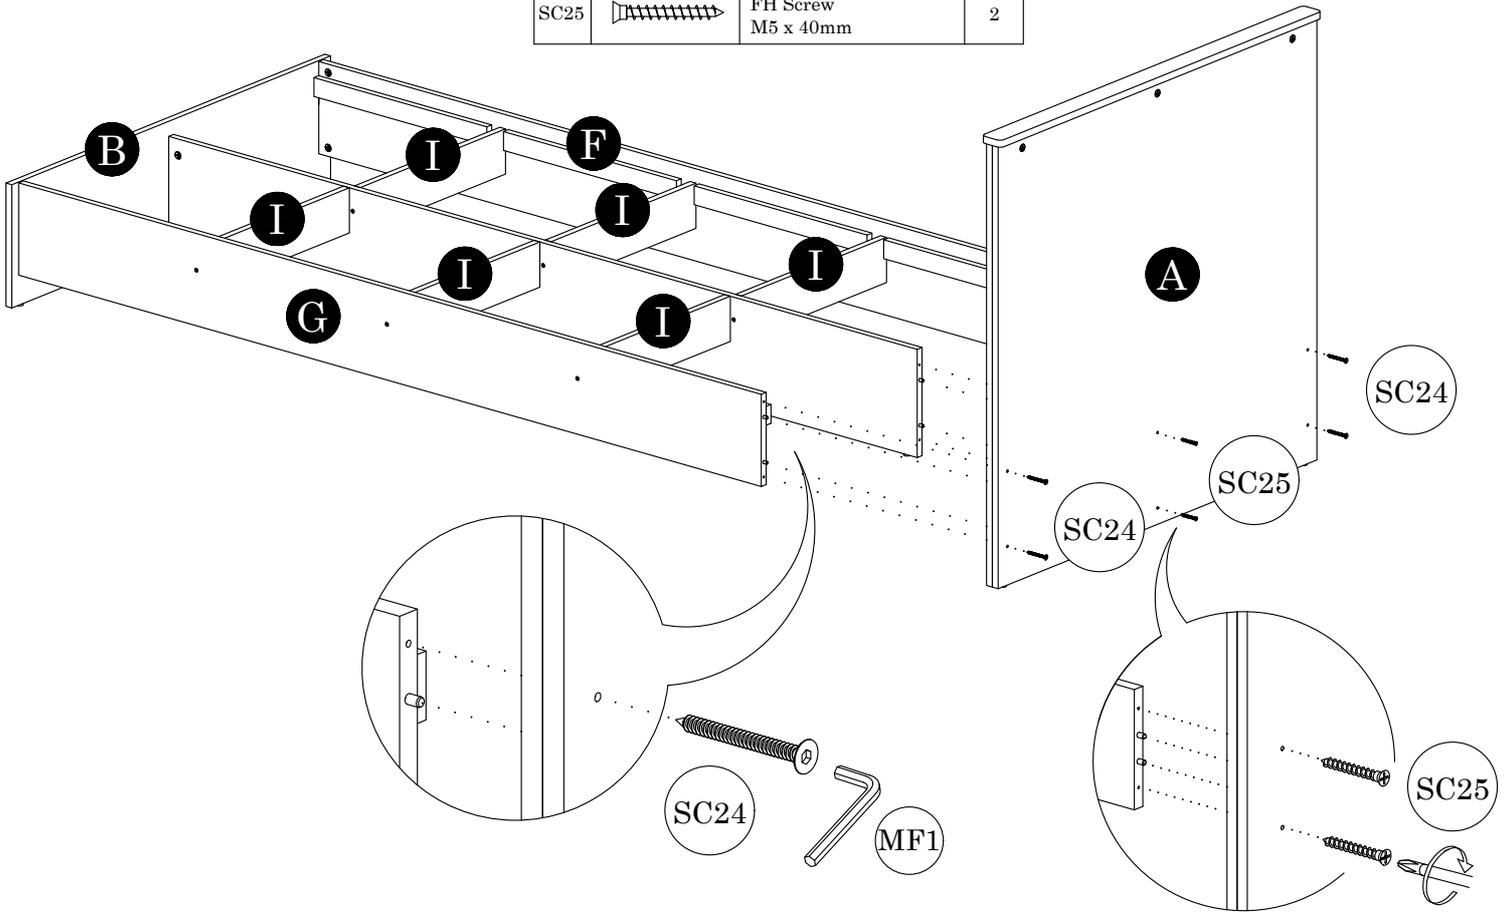



STEP 8

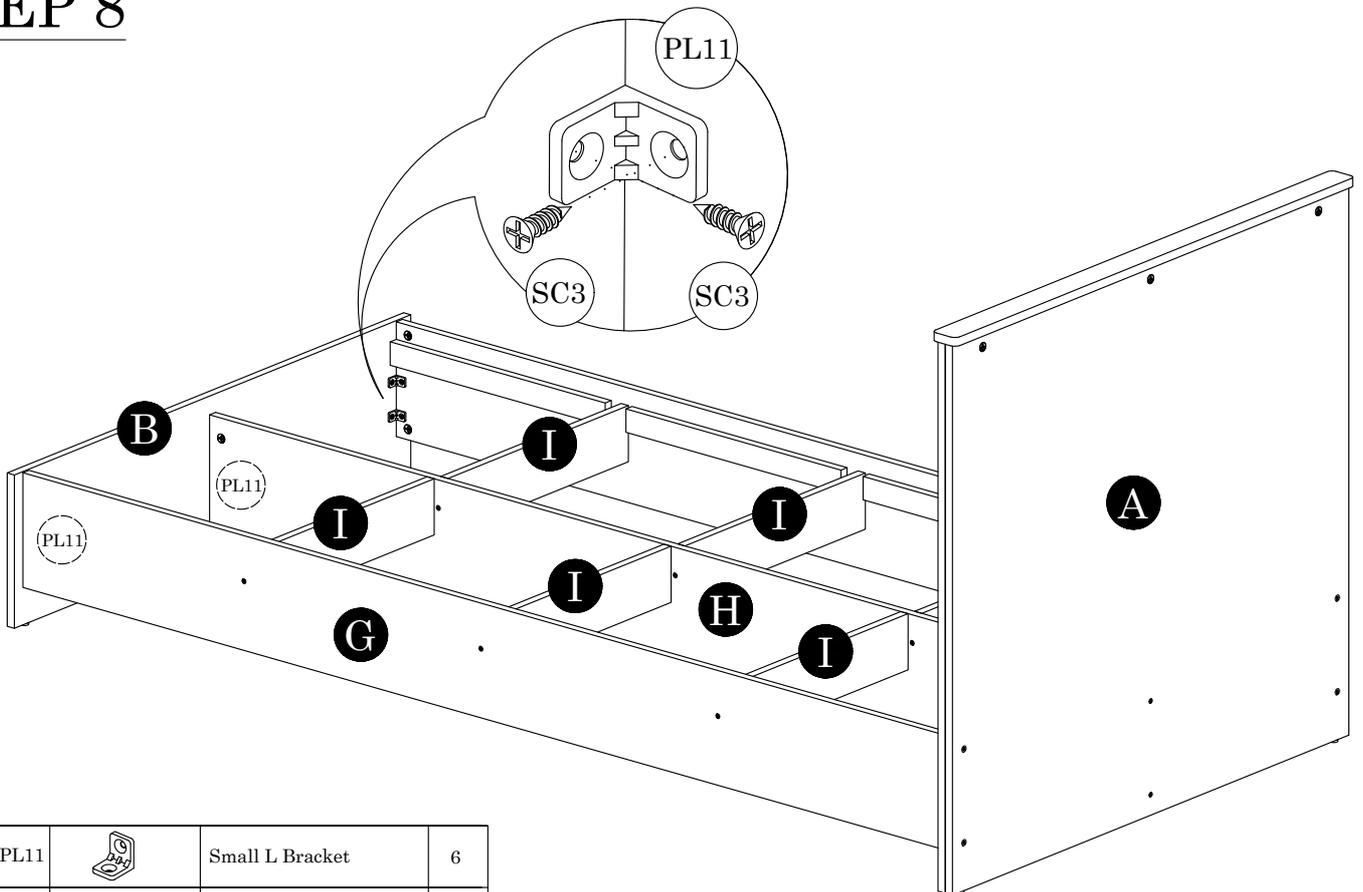

PL11		Small L Bracket	6
SC3		Screw M3.5mm x 14mm	12

STEP 9

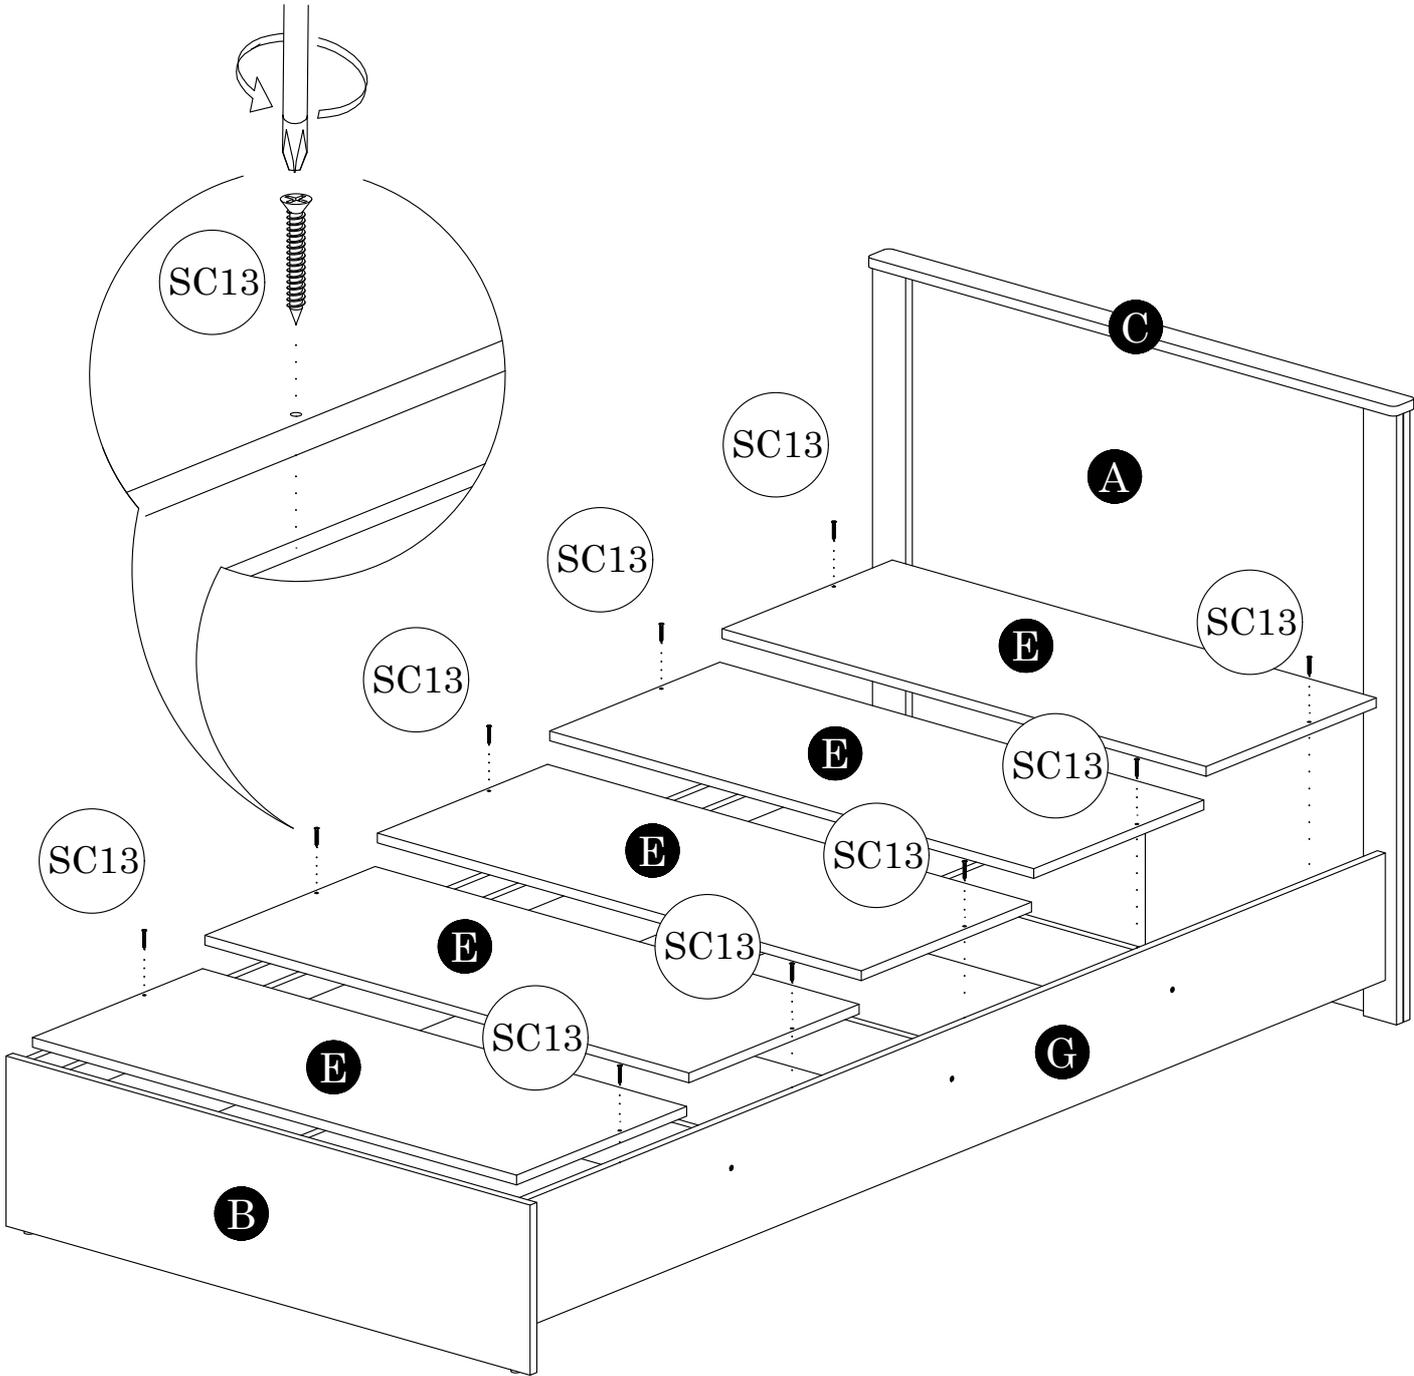

SC13		Screw M4 x 30mm	10
------	--	--------------------	----